

LIP-ME201 BACnet IP to MS/TP Router

Installation instructions

Instructions de montage


Montageanweisung

Montagevoorschrift



Istruzioni di montaggio

Instrucciones de montaje


Monteringsanvisning

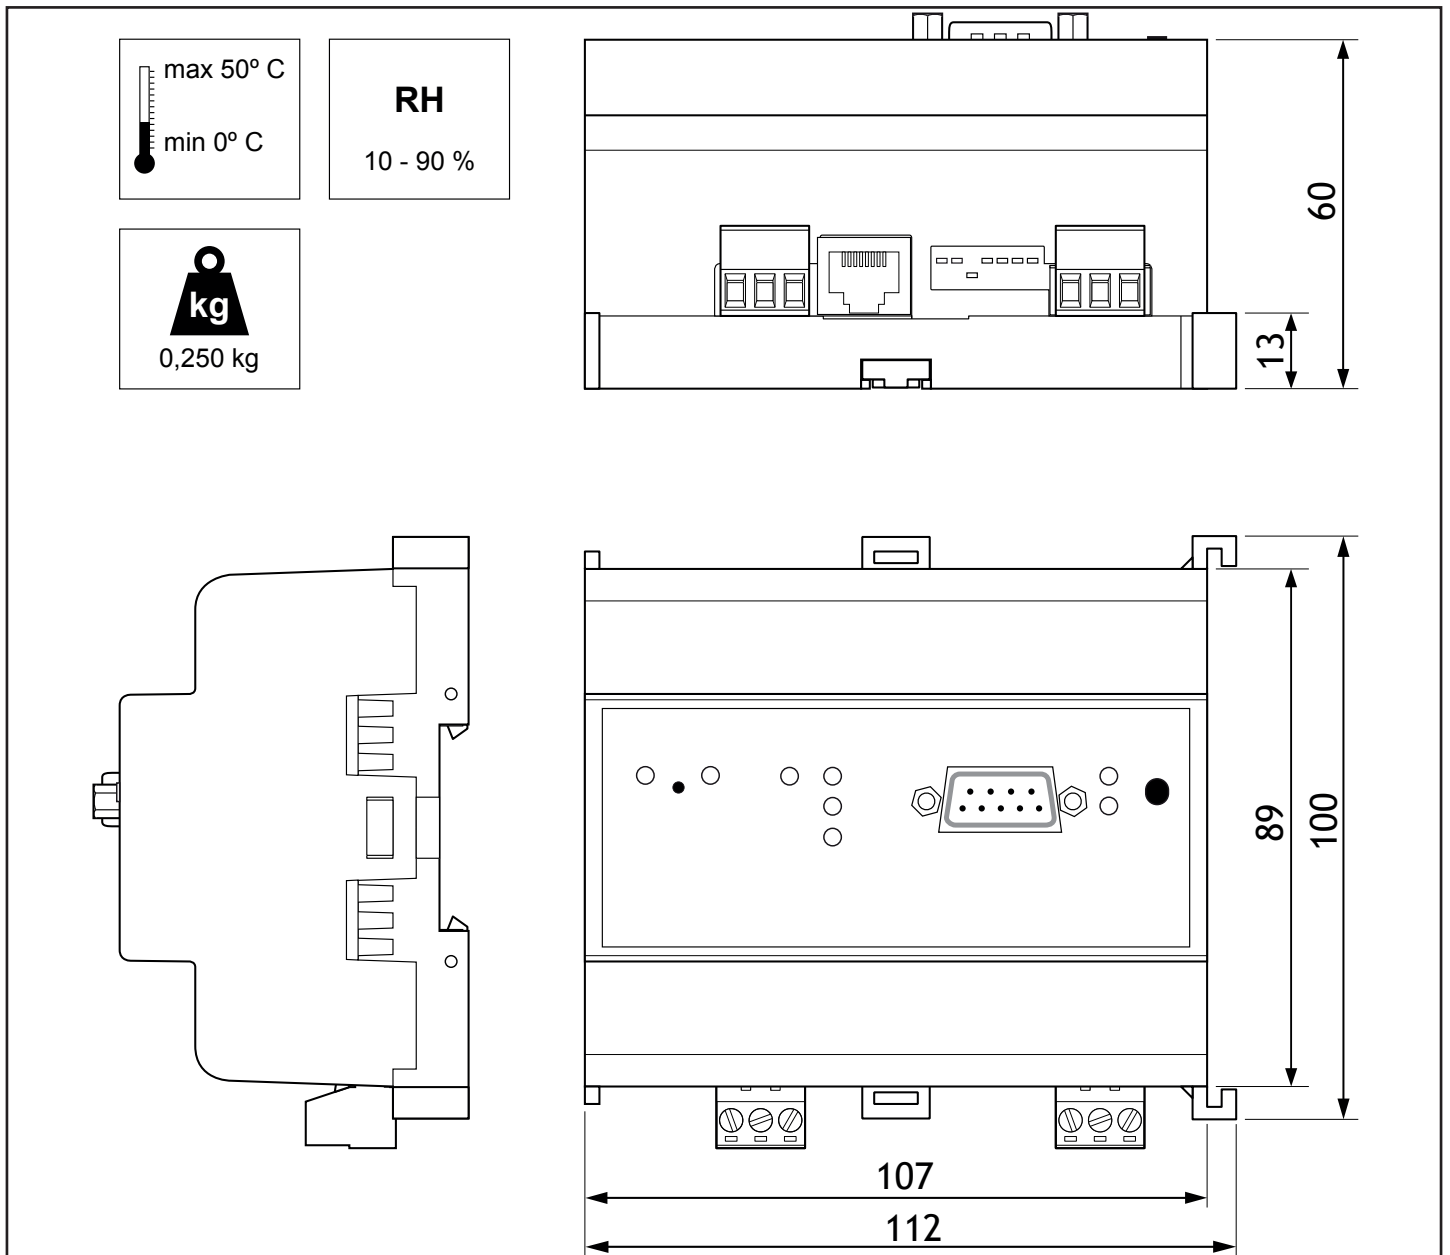


35 mm x 7.5 mm DIN rail (EN 50022, BS 5584, DIN 46277-3)

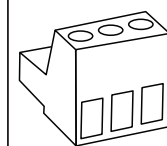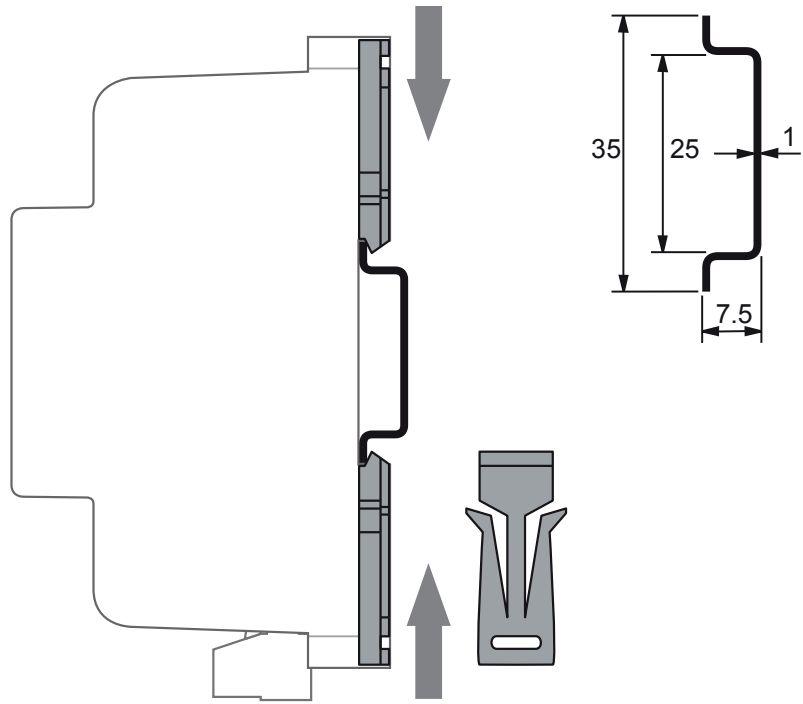

 
Weidmüller
BLZP 5.08/03/180
0.2 - 2.5 mm²



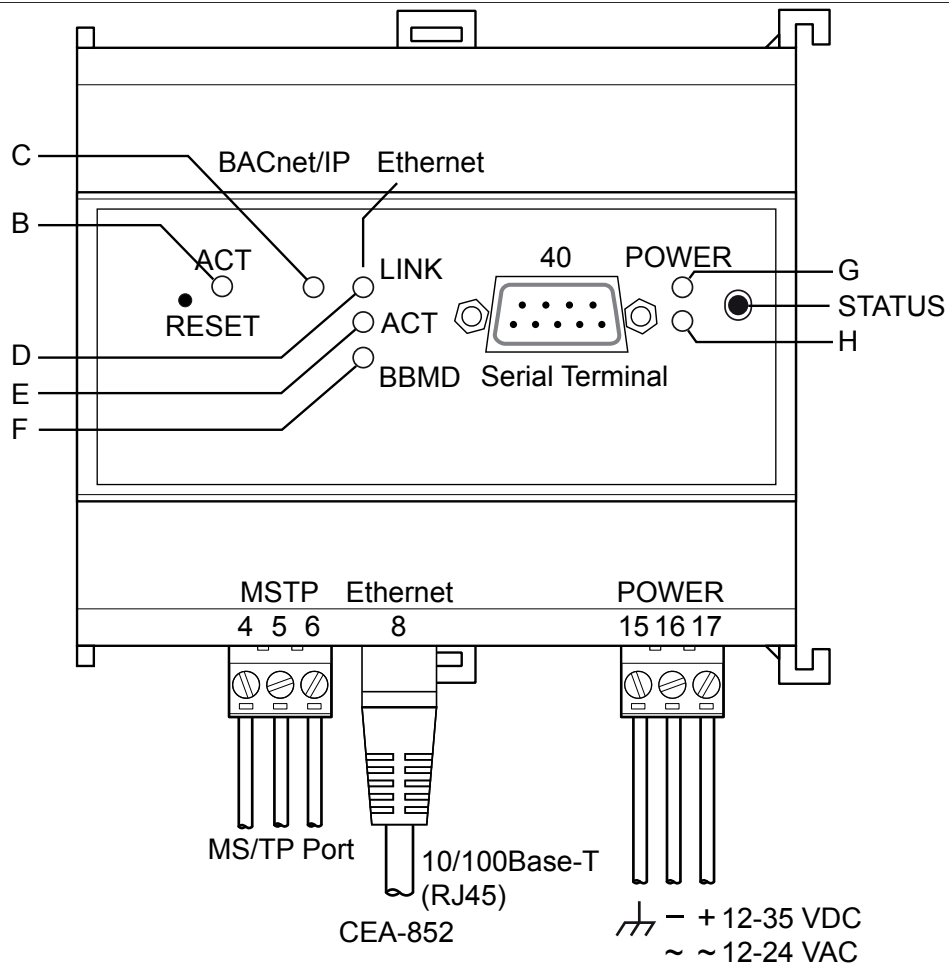

Connectors

MS/TP	4	Input GND
	5	Input +
	6	Input -
Ethernet	8	10/100Base-T (RJ45)
POWER	15	Power supply input EARTH GND
	16	Power supply input MINUS Can be connected to EARTH GND
	17	Power supply input PLUS  Do NOT be connect to EARTH GND
SERIAL	40	EIA-232 (DB9 male)

Buttons

RESET	Reset
STATUS	Send "I AM" pin message

Status LEDs

B	Green flashing fast	Traffic on MS/TP port
	Orange flashing	Sole master
	Red	Communication error
C	Green flashing	Traffic on BACnet IP port
D	Green	Ethernet link
E	Green flashing	Ethernet traffic
F	Green	BBMD enabled
G	Green	Power
H	OFF	Normal operation

<http://192.168.1.254>

User: admin

Password: loytec4u

