

LIOB-A2 Adapter

Installation instructions

Instructions de montage


Montageanweisung


Montagevoorschrift

Istruzioni di montaggio


Instrucciones de montaje

Monteringsanvisning

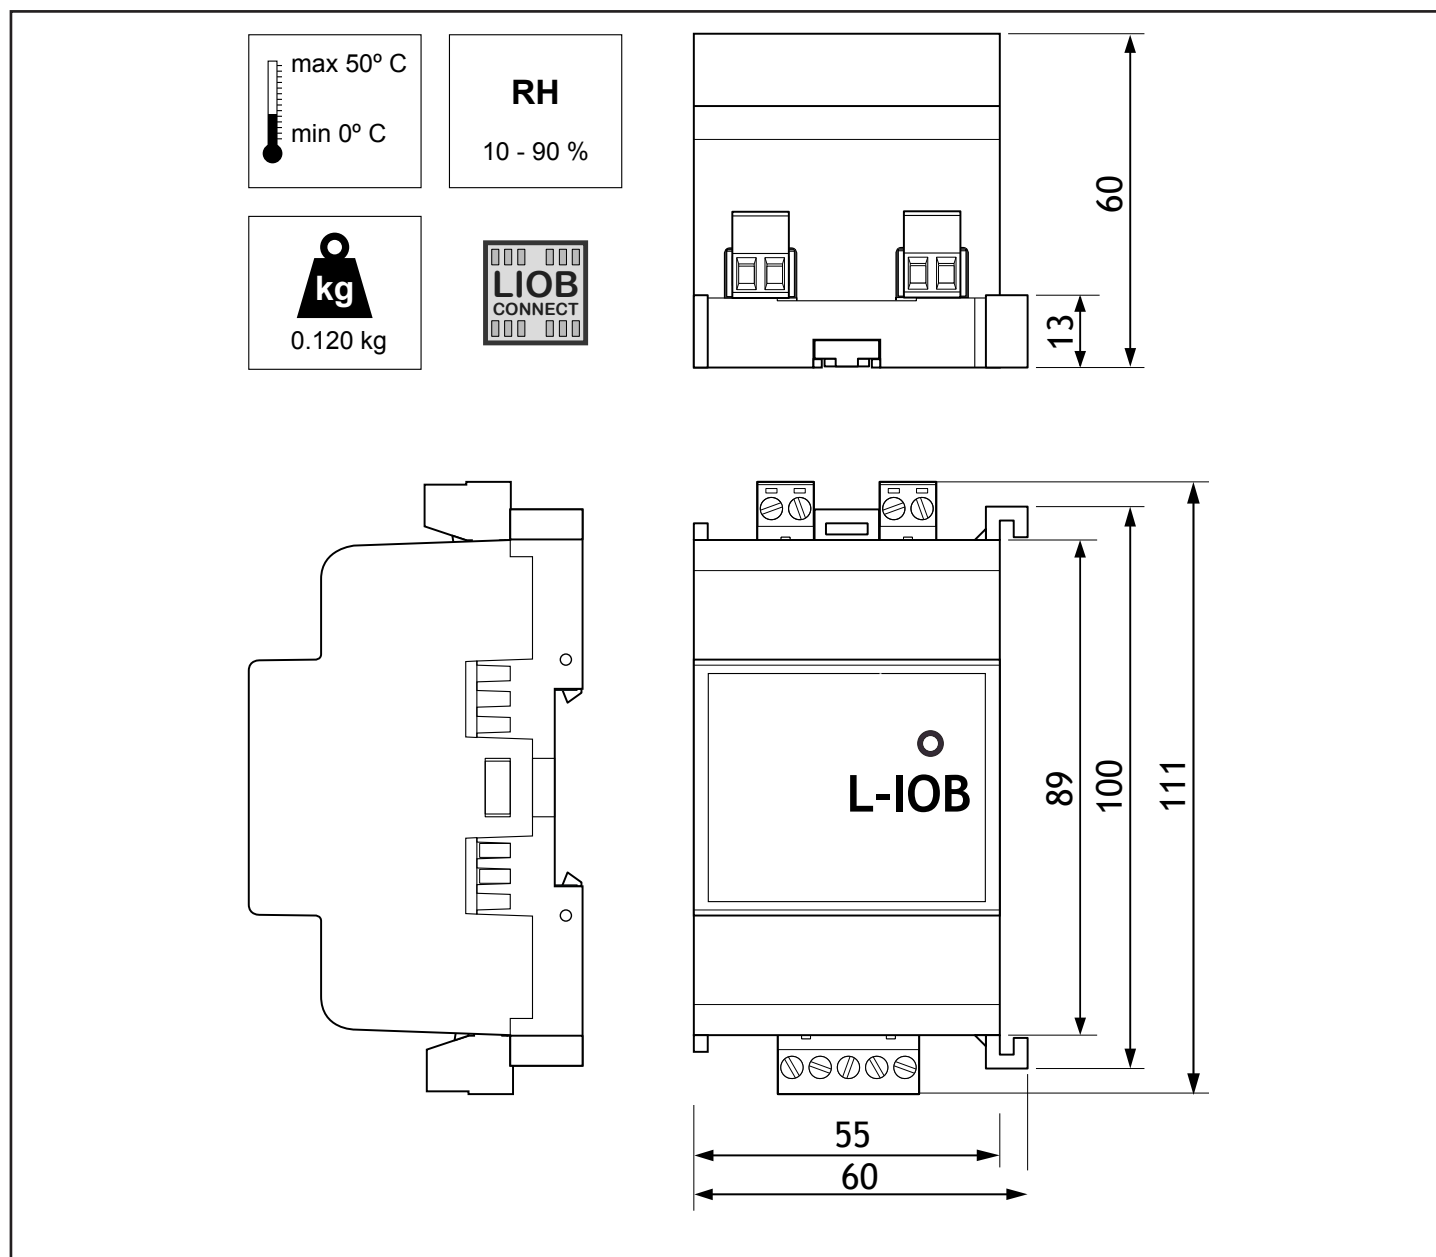



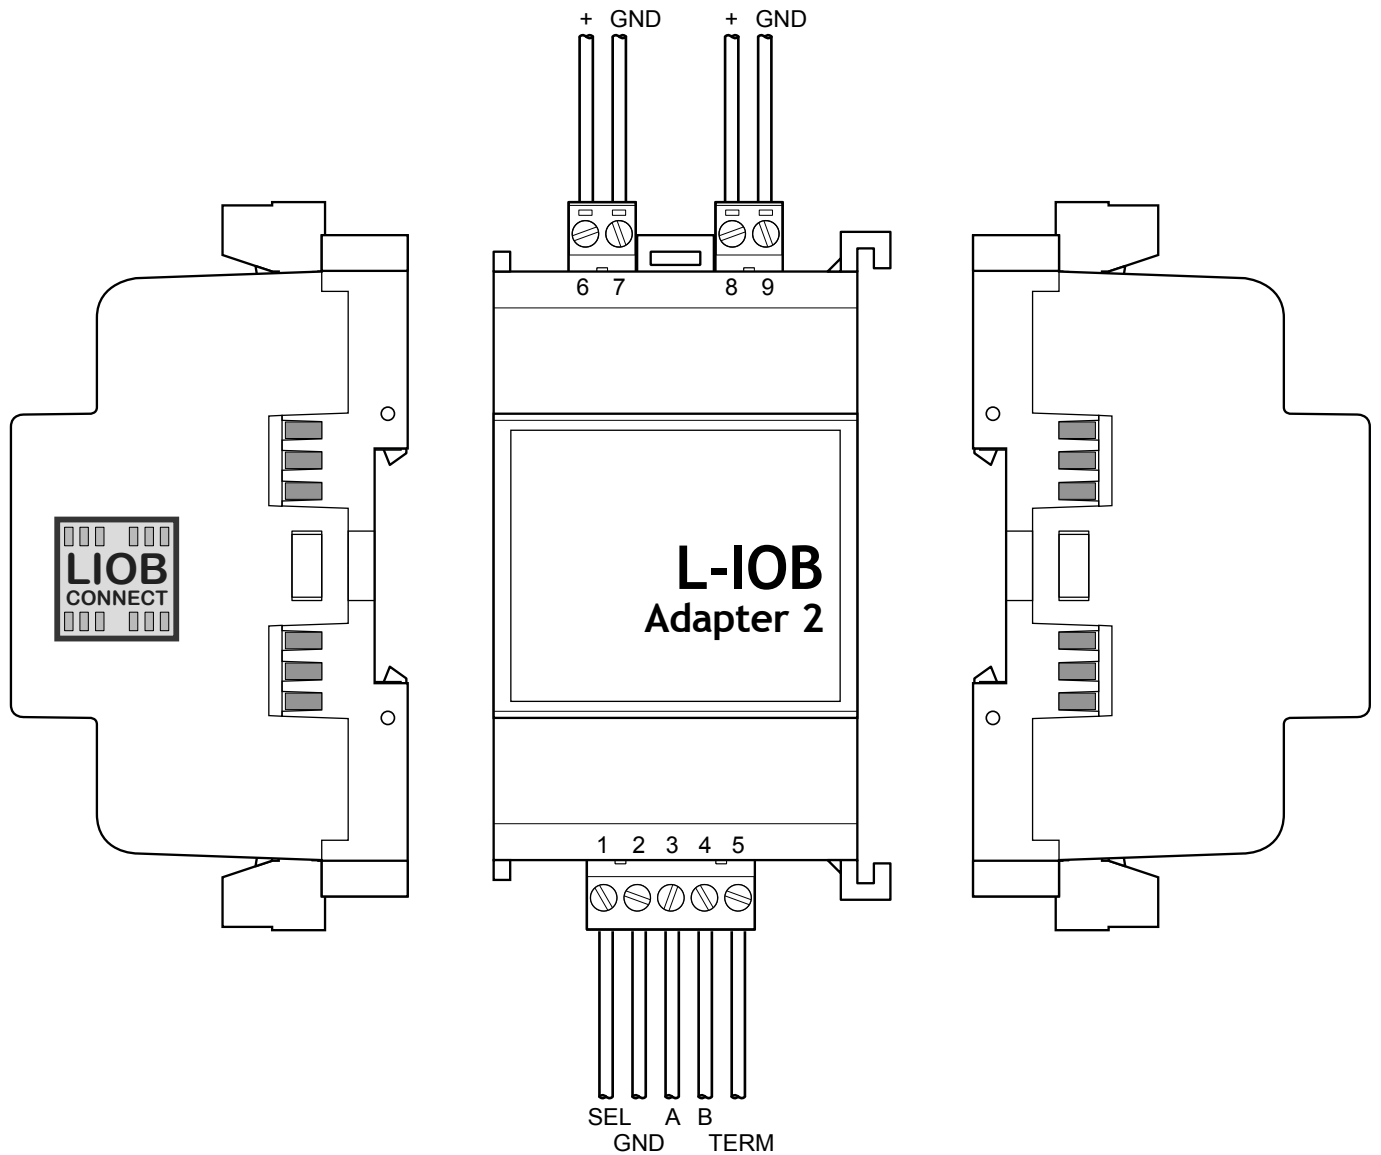


Connectors		
LIOB CONNECT IN/OUT	1	SEL
	2	GND
	3	A, Noninverting Input/Output
	4	B, Inverting Input/Output
	5	TERM
POWER SUPPLY	6	Input 24 V PLUS
	7	Input GND
POWER OUTPUT max. 100mA	8	Output 24 V PLUS
	9	Output GND

 


2 poles: Weidmüller BLZP 5.08/02/180
5 poles: Weidmüller BLZP 5.08/05/180

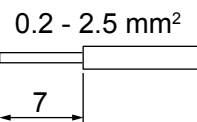

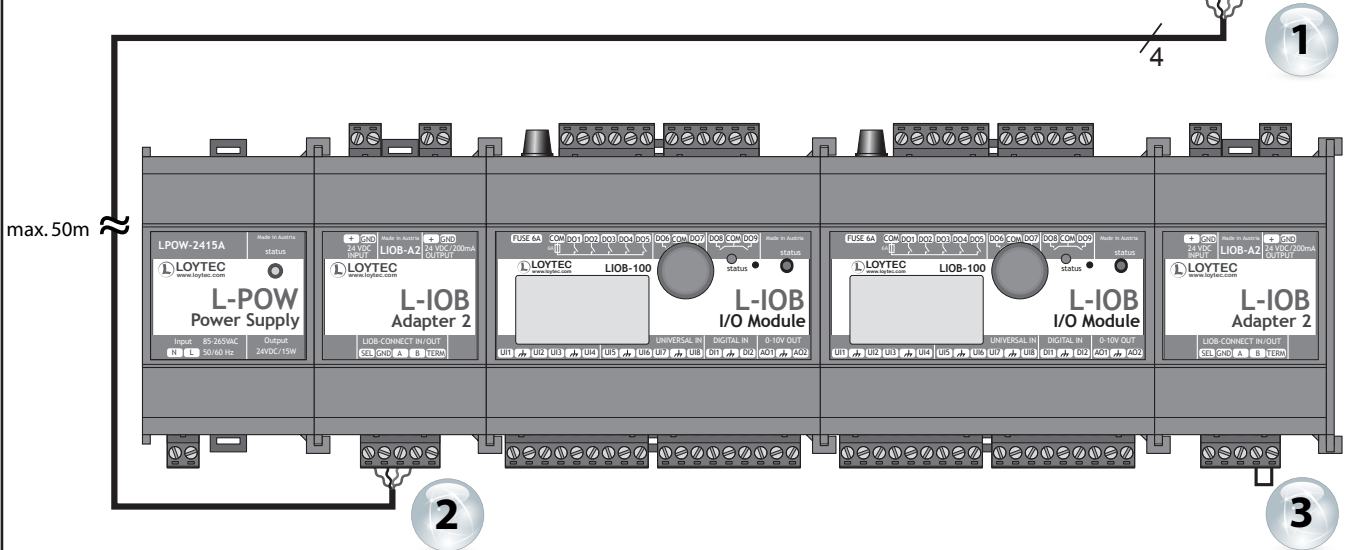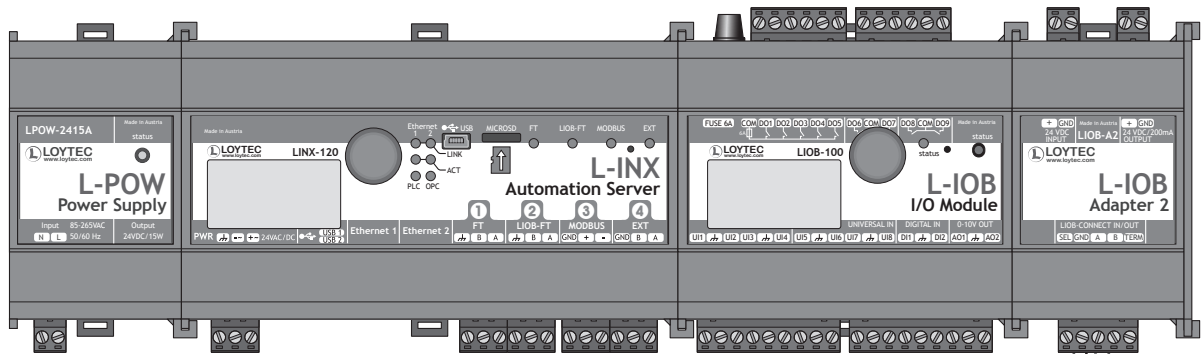


LIOB-A2 schematics to extend the LIOB-Connect bus

Use a 4-pole cable (max. 50 m) to connect 2 LIOB-Connect lines:

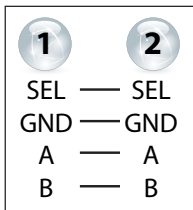

Install the cover on every last device

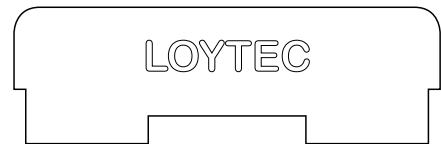

LIOB-A2 for use as a LIOB-Connect terminator

Connect terminal:



35 mm x 7.5 mm DIN rail (EN 50022, BS 5584, DIN 46277-3)

