

Accessories Interfaces

Type	Order No.
<p>CR1</p> <p>Network interface for BC615 reader</p> <p>The CR1 interface converts between RS232 and RS485. It is required when BC615 is connected to SiPass Entro.</p> 	S24246-C3651-A1
<p>IF1</p> <p>SiPass Entro Interface box with cable</p> <p>IF1 is a junction box and cable for the easy connection of a PC (or printer) to SR34i.</p> 	S24246-Z8352-A1
<p>USB-RIF/2</p> <p>Interface for enrolment reader</p> <p>The USB-RIF/2 supports the Clock&Data and Wiegand 26bit interfaces for connecting readers. It is delivered with a one-meter-long USB cable.</p> <p>It can be used with SiPass Entro for three purposes:</p> <ul style="list-style-type: none"> • Easy programming of cards and tags • Login reader for card/tag logon to the SiPass Entro software • Fast search for cardholder/person <p>Please also see the TG-EM USB or TG-Cotag USB reader kits, which include a PR500 reader and a desk stand as well as a USB-RIF/2 interface.</p> 	S24246-F8655-A1
<p>Tamper Kit</p> <p>Tamper Kit for SR34i and DC22</p> <p>This product can be used with DC22 and SR34i. It offers the added security of a backside tamper switch, to achieve protection against attempts to tear the controllers off the wall.</p> <p>Packing unit ten pieces.</p> 	S54513-S3-A1