

L-TEMP1, L-TEMP2 External temperature sensor

Installation instructions

Instructions de montage


Instruzioni di montaggio

Montageanweisung

Instrucciones de montaje

Montagevoorschrift

Monteringsanvisning

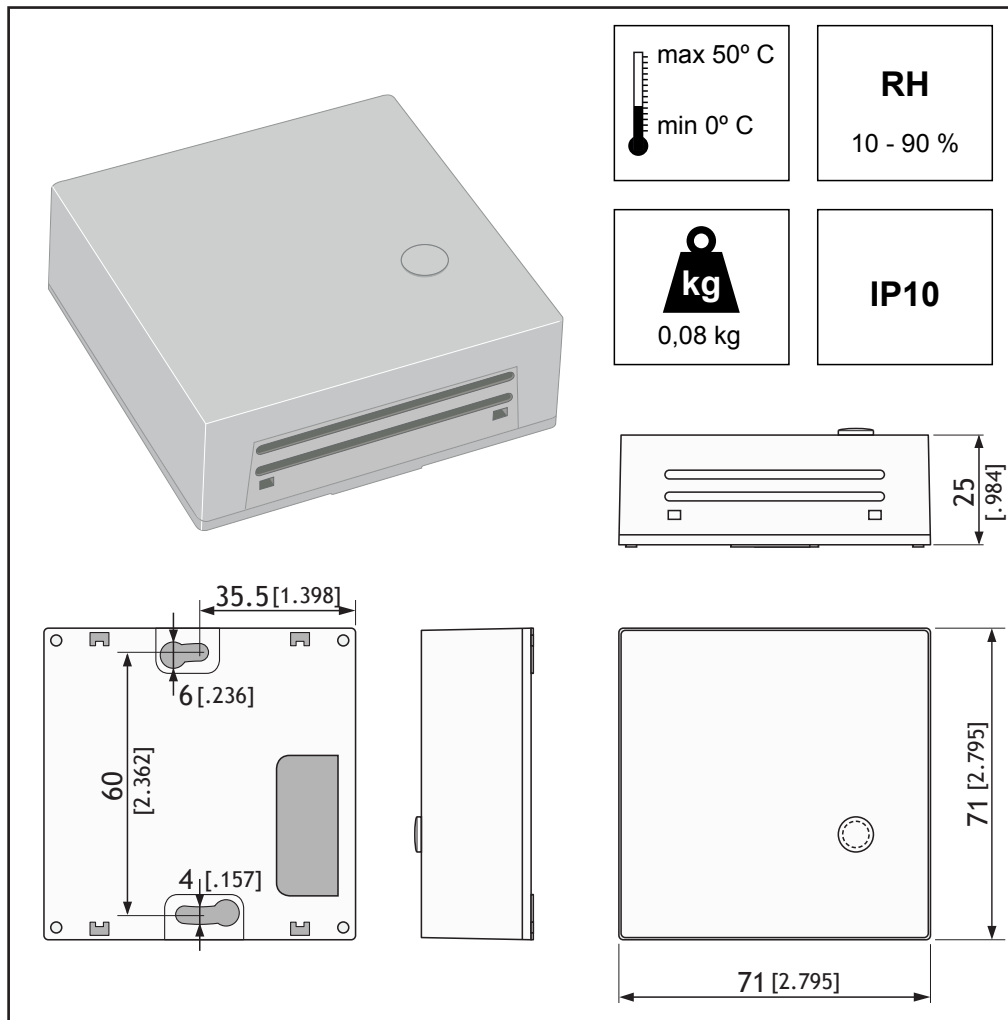


LOYTEC

L-TEMP1:


screw-terminal

- 1 DATA TEMPERATURE
- 2 GND
- 3 3.3 - 5V DC

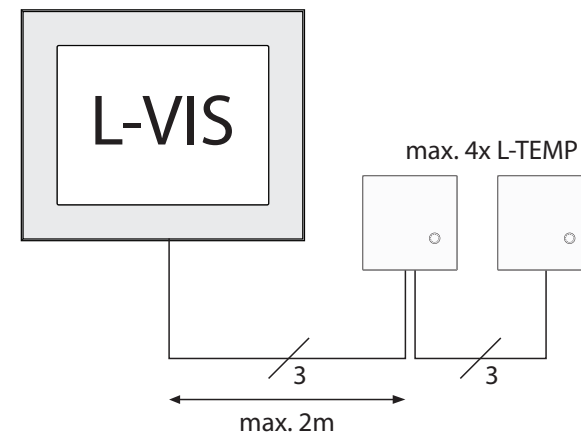

L-TEMP2:

screw-terminal

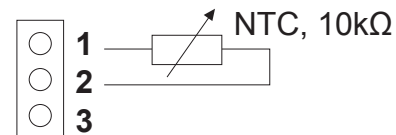

Document 88086301
2016-01
Printed in Austria
Data is subject to change

LOYTEC
<http://www.loytec.com>
support@loytec.com