

SIEMENS



Semi-flush-mounted room temperature controllers for VAV / CAV applications, with LCD

RDU340

Basic Documentation

Edition: 2.0

CE1P3078en
2014-09-05

Building Technologies

Table of contents

| | | |
|--------------|--|----|
| 1 | About this document | 4 |
| 1.1 | Revision history | 4 |
| 1.2 | Reference documents..... | 4 |
| 1.3 | Before you start | 4 |
| 1.3.1 | Copyright..... | 4 |
| 1.3.2 | Quality assurance | 4 |
| 2 | Summary | 5 |
| 2.1 | Brief description..... | 5 |
| 2.2 | Features | 5 |
| 2.3 | Type summary | 5 |
| 2.4 | Equipment combinations..... | 6 |
| 2.5 | Accessories | 6 |
| 2.6 | Ordering | 6 |
| 3 | Use | 7 |
| 4 | Functions | 8 |
| 4.1 | Temperature control..... | 8 |
| 4.2 | Operating modes | 9 |
| 4.3 | Setpoints | 10 |
| 4.4 | Applications | 11 |
| 4.5 | Additional features..... | 12 |
| 4.6 | Control sequences..... | 14 |
| 4.6.1 | Single duct..... | 14 |
| 4.6.2 | Single duct with electrical heater | 16 |
| 4.7 | Control output..... | 17 |
| 4.8 | Multifunctional input | 18 |
| 4.9 | Error handling | 19 |
| 4.10 | DIP switches..... | 19 |
| 4.11 | Control parameters | 20 |
| 5 | Handling | 23 |
| 5.1 | Mounting and installation | 23 |
| 5.2 | Operating Instructions..... | 25 |
| 5.3 | Disposal | 25 |
| 6 | Engineering | 26 |
| 6.1 | Connection terminals | 26 |
| 6.2 | Connection diagrams..... | 26 |
| 7 | Mechanical design | 27 |
| 7.1 | Dimensions..... | 28 |
| 8 | Technical data | 29 |
| Index | | 31 |

1 About this document

1.1 Revision history

| Edition | Date | Changes | Section | Pages |
|---------|------------|---|---------|-------|
| 2.0 | 2014-09-04 | Update P51 Mounting and wiring information Date format changed in line with ISO 8601 specifications (yyyy-mm- dd format). | | |
| 1.0 | 2008-07-11 | First edition | | |

1.2 Reference documents

| Ref. | Document title | Type of document | Document No. |
|-------|---|------------------|--------------|
| N3078 | Semi-flush-mounted room temperature controllers with LCD | Datasheet | CE1N3078en |
| B3076 | Operating Instructions | | CE1B3076en |
| M3078 | Mounting Instructions | | CE1M3078xx |

1.3 Before you start

1.3.1 Copyright

This document may be duplicated and distributed only with the express permission of Siemens, and may be passed only to authorized persons or companies with the required technical knowledge.

1.3.2 Quality assurance

These documents have been prepared with great care.

- The contents of all documents are checked at regular intervals.
- Any corrections necessary are included in subsequent versions.
- Documents are automatically amended as a consequence of modifications and corrections to the products described.

Please ensure that you are aware of the latest revision date of the documentation. If you find any lack of clarity while using this document, or if you have any criticisms or suggestions, please contact the product manager in your nearest branch office, or write directly to the support team at Headquarters in Zug (see below).

Support address:

Siemens Switzerland Ltd.
Building Technologies Group
International Headquarters
Field Support 5500
Gubelstrasse 22
6301 Zug, Switzerland
Tel. +41 41 724 5500
Fax. +41 41 724 5501
E-mail: fieldsupport-zug.ch.sbt@siemens.com

2 Summary

2.1 Brief description

The devices support VAV heating and cooling systems:

- **Modulating PI / P control**
- **Control depending on the room or the return air temperature**
- **Output for a DC 0...10 V actuator and AC 230V electrical heater (ON-OFF)**
- **Automatic or manual heating/cooling changeover**
- **Operating modes: Comfort, Energy Saving and Protection**
- **Two multifunctional inputs for keycard contact, external sensor, etc.**
- **Adjustable commissioning and control parameters**
- **Minimum and maximum setpoint limitation**
- **Adjustable minimum and maximum limitation of output signal DC 0..10V**
- **Output signal inversion as an option**
- **Mounting on recessed rectangular conduit box, 60.3 mm fixing centers**
- **AC 24 V operating voltage**

2.2 Features













- Maintain room temperature via built-in temperature sensor external room temperature / return air temperature sensor.
- Automatic or manual changeover between heating and cooling mode.
- Select applications via DIP switches
- Select operating mode via the operating mode button on the controller.
- Display current room temperature or setpoint in °C and/or °F.
- Minimum and maximum setpoint limitation.
- Keypad lock (automatic and manual).
- Two multifunctional inputs, freely selectable for:
 - Operating mode switchover contact (key card).
 - Automatic heating/cooling changeover sensor.
 - External room temperature or return air temperature
 - Dewpoint sensor.
 - Electric heater enable.
 - Alarm input.
- Minimum and maximum limitation of air flow signal DC 0..10V
- Floor heating temperature limit
- Reload factory settings for commissioning and control parameters.

2.3 Type summary

| Product number | Operating Voltage | Control output | | | LCD Backlight | Infrared receiver | Housing Colour |
|----------------|-------------------|----------------|--------|------------|---------------|-------------------|----------------|
| | | 3 pt | on/off | DC 0..10 V | | | |
| RDU340 | AC 24 V | -- | ✓ | ✓ | | | white |

2.4 Equipment combinations

DC 0..10 V actuators

| Type of unit | | Product number | Data sheet |
|---|--|--------------------|------------|
| Cable temperature sensor |  | QAH11.1 | 1840 |
| Room temperature sensor |  | QAA32 | 1747 |
| Electrical actuator, DC 0..10V (for radiator valve) |  | SSA61... | 4893 |
| Electrical actuator, DC 0..10V (for small valve 2,5 mm) |  | SSP61... | 4864 |
| Electrical actuator, DC 0..10V (for small valves 5.5 mm) |  | SSB61... | 4891 |
| Electromotoric actuator, DC 0..10V (for valves 5.5 mm) |  | SQS65... | 4573 |
| Thermal actuator, DC 0..10V (for small valves and radiator valves) |  | STS61 | 4880 |
| |  | GQD161... | 4605 |
| |  | GDB161... | 4634 |
| | | GLB161... | |
| DC 0...10 V damper actuator |  | GMA161... | 4614 |
| | | GEB161... | 4621 |
| | | GCA161... | 4613 |
| |  | GGB161... | 4626 |
| | | GIB161... | |
| | | GCA161... | |
| VAV compact controller |  | GDB181.1E/3 | 3544 |
| | | GLB181.1E/3 | |

2.5 Accessories

| Type of unit | Product number | Data sheet |
|---|----------------|------------|
| Changeover sensor mounting kit (50 pcs/package) | ARG86.3 | 1840 |
| Adapter plate 82mm x 82 mm x 10 mm for conduit | ARG70.3 | -- |

2.6 Ordering

When ordering, indicate both product number and name:

E.g. **RDU340** room temperature controller

Order valve actuators separately.

3 Use

Control of the room temperature in individual rooms of ventilation or air conditioning plants that are:

- Heated or cooled by single duct.
- Heated and cooled by single duct with auxiliary electrical heater.

The RDU340 is suitable for use with VAV systems in connection with the VAV compact controllers types G...B181.1E/3.

The RDU340 controls

- One DC 0...10 V actuator
- One DC 0...10 V actuator and AC 230V 1-stage electrical heater

Use in systems with:

- Heating or cooling mode
- Automatic heating/cooling changeover
- Manual heating/cooling changeover
- Heating and cooling (single duct with electrical heater)

4 Functions

4.1 Temperature control

General note

The setting of the control parameters (P01 etc., mentioned throughout the document) is described in section 4.11.

The controller acquires the room temperature via built-in sensor, external room temperature sensor (QAA32), or external return air temperature sensor (QAH11.1), and maintains the setpoint by issuing actuator control commands to heating and/or cooling equipment. The following control outputs are available:

- Modulating PI / P control with DC 0..10 V control output for actuators and ON-OFF for electrical heater.

The switching differential or proportional band is 2 K for heating mode and 1 K for cooling mode (adjustable via parameters P30 and P31).

 


 
The integral action time for continuous PI control is 5 minutes (adjustable via parameter P35).

Display

The display shows the acquired room temperature or the setpoint for the current operating mode, selectable via parameter P06. The factory setting displays the current room temperature.

Use parameter P04 to display the room temperature or setpoint in °F rather than °C as needed.




If the controller is used in a system with manual heating/cooling changeover (P01=2), the heating  and cooling  symbols on the display show the terminal unit status. Thus, the symbols are displayed even when the controller operates in the neutral zone. For all other cases, the heating  and cooling  symbols are displayed when the heating or cooling output is energized.

Concurrent display of °C and °F

Concurrent display of the current temperature or setpoint in °C and in °F (parameter P07) is possible on the controller without weekly time program.


4.2 Operating modes

Select the controller's operating mode via operating mode button  on the controller or operating mode input (e.g. keycard occupancy sensor, when X1 or X2 set to 3 (P38, P40)). A corresponding setpoint is used to maintain the room temperature at the desired level depending on the active operating mode. The following operating modes are available:

Comfort mode

In Comfort mode, the controller maintains the setpoint which can be adjusted via the +/- buttons.

Energy Saving

Energy Saving mode helps save energy. Select it by pressing the operating mode button  if parameter P02 is set accordingly, or if the external operating mode switchover contact is active (e.g. window contact).

Note

If the external operating mode switchover contact is active, user operations are ineffective and "OFF" is displayed. Control will then be according to energy saving setpoints (P11 and P12).

Standby /Protection mode

In Standby mode, the system is

- protected against frost (factory setting **8 °C**, can be disabled or changed via P65).
- protected against overheating (factory setting **OFF**, can be enabled or changed via P66)

4.3 Setpoints

Comfort mode ☼

The setpoint in Comfort mode can be adjusted via the +/- buttons.

Setpoint limitation

For energy saving purposes, the setpoint adjusting range can be limited to minimum (P09) and maximum (P10).

P09 < P10

- If the minimum limit **P09 is set lower** than the maximum limit P10, both heating and cooling are adjustable between these two limits.

P09 ≥ P10

- For heating **or** cooling applications (e.g. single duct)
 - The setting range in cooling mode is from **P09...40°** instead of 5...40°
 - The setting range in heating mode is from **5...P10°** instead of 5...40°
- For cooling and heating with el. heater applications (e.g. single duct)
 - The setting range is from P09...40° instead of 5...40°
 - The setpoint for the el. heater is maximal limited by P10

| Examples | Single duct heating or cooling | Single duct cooling with el heater |
|-----------|---|--|
| P09 < P10 | <p>5°C 18°C 25°C 40°C P09 P10</p> <p>Cooling setpoint adjustable 18...25°C Heating setpoint adjustable 18...25°C</p> | <p>5°C 18°C 25°C 40°C P09 P10</p> <p>Setpoint adjustable 18...25°C Heating setpoint := Cooling setpoint – dead zone</p> |
| P09 ≥ P10 | <p>5°C 21°C 25°C 40°C P10 P09</p> <p>Cooling settable 25...40°C Heating settable 5...21°C</p> | <p>5°C 21°C 25°C 40°C P10 P09</p> <p>Setpoint adjustable 25...40°C Heating setpoint := Cooling setpoint – dead zone, but max (limited by) P10</p> |

Temporary setpoint

If the “Temporary setpoint function” is enabled via parameter P69, the setpoint adjusted via the +/- buttons is set back to the Comfort basic setpoint when the operating mode changes.

The factory setting for the Comfort basic setpoint is **21 °C** and can be changed via parameter P08.

Energy Saving mode ☾

Use control parameters P11 and P12 to adjust the Economy mode setpoints. The heating setpoint is factory-set to **15 °C** and to **30 °C** for cooling.

Standby mode ⏻

Use control parameters P65 and P66 to adjust the Standby mode setpoints. The heating setpoint is factory-set to **8 °C** (frost protection) and to **OFF** for cooling.


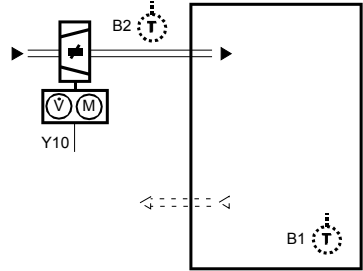

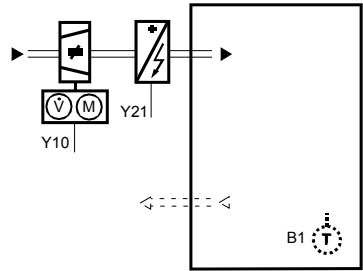
Caution ⚠

If a setpoint is set to OFF (P65, P66), the controller does not maintain the setpoint in the corresponding mode (heating or cooling).

This means no protective heating or cooling function and thus risk of frost in the heating mode or risk of overheat in cooling mode!

4.4 Applications

The controller supports following applications, which can be configured by DIP-switches on the inner side of the controller front panel.

| Application and Control output | Type reference | DIP-switch | Diagram |
|---|---|---|--|
| Single duct, heating or cooling | modulating, DC 0...10 V RDF340 |  |  |
| Single duct with electrical heater, cooling and heating, with auxiliary heater | modulating, DC 0...10 V Note: on-off electrical heater RDF340 |  |  |


Key

- Y1 Heating or heating/cooling valve actuator
- E1 Electrical heater
- B1 Return air temperature sensor or external room temperature sensor (optional)
- B2 Changeover sensor (optional)

4.5 Additional features


Automatic H/C changeover

The air or water temperature acquired by the changeover sensor (QAH11.1) is used to change over from heating to cooling mode and vice-versa. When the water temperature is above 28 °C (parameter P37), the controller changes over to heating mode, and to cooling mode when below 16 °C (parameter P36). If the water temperature is between the 2 changeover points immediately after power up, the controller starts in heating mode. The water temperature is acquired at 30-second intervals and the operating state is updated accordingly.

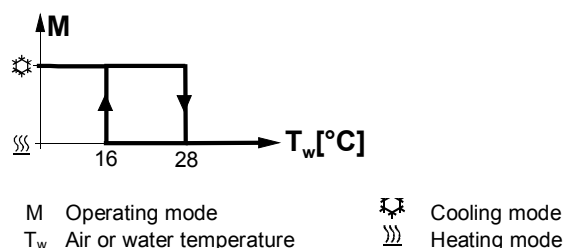

Remote heating/cooling changeover

The QAH11.1 cable temperature sensor for automatic heating/cooling changeover can be replaced by an external switch for manual, remote changeover:

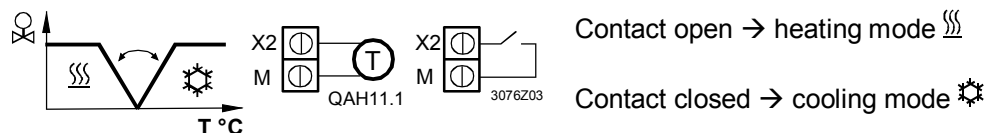

The sensor or switch can be connected to the input terminal of X2 (factory setting) or X1 depending on the commissioning of inputs X1 and X2. See also section “Multifunctional input”.

External/return temperature sensor

The controller acquires the room temperature via built-in sensor, external room temperature sensor (QAA32), or external return air temperature sensor (QAH11.1) connected to multifunctional input X1 or X2.

Inputs X1 or X2 need to be commissioned accordingly. See section 4.8 “Multifunctional input”.

Dewpoint monitoring

Dewpoint monitoring is essential to prevent condensation on the chilled ceiling and help avoid associated damage to the building. This is an optional function and is provided in case the controller is used for a chilled ceiling application.

A dewpoint sensor with a voltage-free contact is connected to multifunctional input X1 or X2. If there is condensation, the cooling valve is fully closed until no more condensation is detected and the cooling output is disabled temporarily. The condensation symbol Δ is displayed during temporary override.

Input X1 or X2 must be commissioned accordingly.

See section “4.8 Multifunctional input”.


Keypad lock

If the keypad lock function is enabled by parameter P14, then pressing 7 seconds on the operating mode button \odot , the keypad will be locked or unlocked respectively.

If “Auto lock” is configured, then the controller will automatically lock the keypad after 30 seconds of the last adjustment.

Min / Max air flow

The output signal of the air flow (DC 0..10V) can be limited to a minimum value by using parameter P63 and to a maximum value using parameter P64. These air flow limitation values can be set between 0% and 100%. This is used to ensure a minimum or maximum supply air volume.

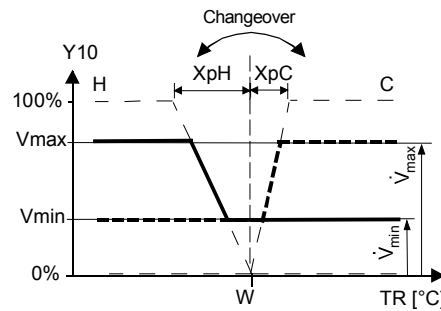

| | |
|------|-----------------------------|
| T | Room temperature |
| Y10 | Control output |
| W | Room temperature setpoint |
| XpH | Proportional band Heating |
| XpC | Proportional band Cooling |
| Vmin | Minimum limitation air flow |
| Vmax | Maximum limitation air flow |

Output signal inversion

The output signals DC 0...10V can be inverted by means of DIP switch #2.

- If DIP switch #2 is set to “OFF”, 0V corresponds to 0% travel and 10V to 100% (factory setting).
- In position ON, 0V corresponds to 100% travel and 10V to 0% travel.

This function is useful in conjunction with normally open valves.

Floor temperature limitation function

The floor temperature should be limited for 2 reasons: Comfort and protection of the floor.

The floor temperature sensor, connected to multifunctional input X1, acquires the floor temperature. If the floor temperature exceeds the parameterized limit (parameter P51), the heating valve is fully closed until the floor temperature drops to a level 2 K below the parameterized limit.

This function is factory-set to OFF (disabled).

Input X1 or X2 must be commissioned accordingly (P38 = 1).

See section 4.8“Multifunctional input”.

Recommended values for P51:

Living rooms:

Up to 26 °C for long-time presence, up to 28 °C for short-time presence.

Bath rooms:

Up to 28 °C for long-time presence, up to 30 °C for short-time presence.

The table below shows the relation between parameter, temperature source and temperature display:

| Parameter P51 | External temp. sensor available | Source for display of room temperature | Output control according to | Floor temp. limit. function |
|---------------|---------------------------------|--|--|-----------------------------|
| OFF | No | Built-in sensor | Built-in sensor | Not active |
| OFF | Yes | External temp. sensor | External temp. sensor | Not active |
| 10...50 °C | No | Built-in sensor | Built-in sensor | Not active |
| 10...50 °C | Yes | Built-in sensor | Built-in sensor + limit by external sensor | Active |





4.6 Control sequences

4.6.1 Single duct

If the selected application is "single duct", then the controller can be used in systems featuring:

- Heating or cooling mode (P01=0 or P01=1).
- Manual heating/cooling changeover (P01=2).
- Automatic heating/cooling changeover (P01=3).

The relevant modes can be adjusted via commissioning parameter "Control sequence" P01, depending on the selected application.
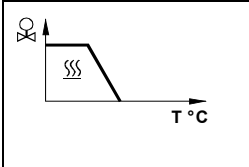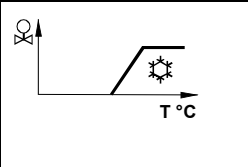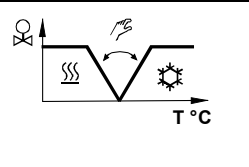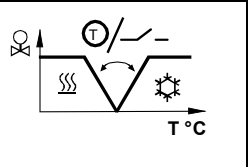
| | | | | |
|----------------|---|---|--|---|
| Sequence |  |  |  |  |
| Parameter | P01 = 0 | P01 = 1 | P01 = 2 | P01 = 3 |
| Mode | Heating mode | Cooling mode | Manually select heating or cooling mode | Automatic heating/cooling changeover via external water temperature sensor or remote switch |
| Available for: | | | | |
| Single duct | ✓ | ✓ | ✓ | ✓ |

In application "Single duct with el. heater", the controller operates in heating AND cooling mode.

Single duct, heating or cooling

In single duct applications, the controller controls an actuator (valve, damper, VAV system, etc)

- in heating/cooling mode with changeover (automatic or manual),
- heating only mode,
- or cooling only mode.


Cooling only is factory set (P01=1).

The output can be limited to a minimum and maximum value if required. See section 4.5 "additional features".


Control sequence modulating output

The diagram below shows the control sequence for continuous PI control.


Heating only mode

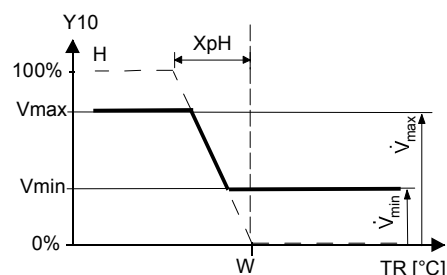

Cooling only mode

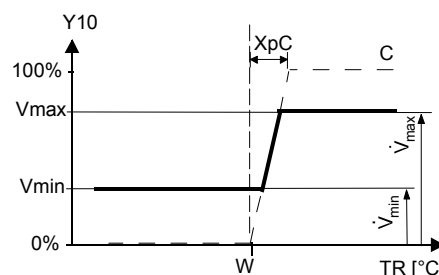

Changeover

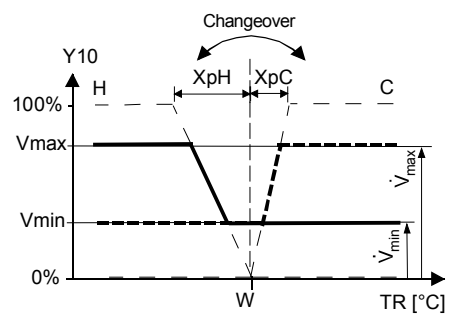

- T[°C] Room temperature
- w Room temperature setpoint
- Y10 Control command "Valve"
- XpH Proportional band "Heating"
- XpC Proportional band "Cooling"
- Vmin Min. limitation for output
- Vmax Max. limitation for output

Note

The diagrams show the PI controller's proportional part only

4.6.2 Single duct with electrical heater

If the selected application is "single duct & el. heater", then the controller works in heating and cooling mode.

The output can be limited to a minimum and maximum value if required. See section 4.5 "additional features".

Single duct with el. heater

In single duct applications with electrical heater, the controller controls an actuator (valve, damper, VAV system, etc.) plus an auxiliary electrical heater.

Note: The setpoint for the electrical heater is limited by parameter "Maximum heating setpoint" (P10).


Digital input "Enable electrical heater"

Remote enabling/disabling of the electrical heater is possible via digital input X1/X2 for tariff regulations, energy saving etc. Input X1 or X2 must be commissioned accordingly. See section "4.9 Multifunctional input".

Control sequence

The diagram below shows the control sequence for continuous PI control.

Cooling and heating with electric heater

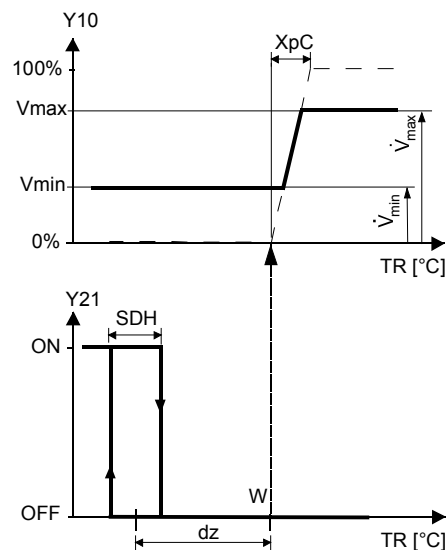

| | | | |
|--------|-------------------------------------|-----------------|-----------------------------|
| TR[°C] | Room temperature | Vmin | Min. limitation for output |
| W | Room temperature setpoint | Vmax | Max. limitation for output |
| Y10 | Control command "actuator" | XpC | Proportional band "Cooling" |
| Y21 | Control command "electrical heater" | X _{dz} | Dead zone |
| | | SDH | Switching differential |

Note: The diagrams show the PI controller's proportional part only.

4.7 Control output

Overview of control output

Different control output signals are available depending on the controller type.

| Control output Type reference | on/off | 3-position | DC 0...10 V |
|----------------------------------|---------|------------|-------------|
| RDU340 | Y21 (1) | -- | Y10 (1) |

() Number of outputs

DC 0...10 V control signal

The demand calculated by the PI control from the current room temperature and setpoint is provided to the valve actuator as a continuous DC 0...10 V signal via output Y10.

Electrical heater control signal (2-position)

The electrical heater receives an **ON** command via the auxiliary heating control output Y21:

1. When the acquired room temperature is below "setpoint for electric heater".
2. When the electrical heater has been switched off for more than 1 minute.

The **OFF** command for the electrical heater is output:

1. When the acquired room temperature is above the setpoint (electric heater).
2. When the electrical heater has been switched on for more than 1 minute.

 Caution

A safety thermostat (to prevent overheating) must be provided externally.

4.8 Multifunctional input

The controller offers two multifunctional inputs X1 and X2. A sensor of type NTC like QAH11.1 (AI) or a switch (DI) can be connected to the input terminals. The functionality of both inputs can be configured via parameters P38 for input X1 and P40 for input X2.

| # | Function of input X1/X2 | Description | Type |
|---|---------------------------|--|---------|
| 0 | Not used | No function. | - |
| 1 | External/Return air temp. | Sensor input external room temperature sensor or return air temperature sensor to measure the current room temperature. | AI |
| 2 | Heat/cool changeover | Sensor input for automatic heating/cooling changeover function. A switch can also be connected rather than a sensor. | AI/(DI) |
| 3 | Operating mode switchover | Digital input to switch over the operating mode to Energy Saving. If the operating mode switchover contact is active, user operations are ineffective and "OFF" is displayed. | DI |
| 4 | Dewpoint monitor | Digital input for a dewpoint sensor to detect condensation. Cooling is stopped if condensation occurs. | DI |
| 5 | Enable electrical heater | Digital input to enable/disable the electrical heater via remote control. | DI |
| 6 | Alarm | Digital input to signal an alarm. If the input is active, "ALx" (x=1 or 2) is displayed. Note: Alarm displays do not influence controller operations. They merely represent a visual signal. <i>Example:</i> No air flow or el. heater overheated. | DI |

Operational action can be changed between normally open (N.O.) and normally closed (N.C.) via parameter P39 or P41 if it is a digital input (DI).

Each function can only be assigned to input X1 or X2; only "Alarm" can be assigned to both inputs.

X1 is factory-set to "Operating mode switchover" (3) and X2 to "Heating/cooling changeover" (2).

For more information see section 4.4 "Applications".

4.9 Error handling

Temperature out of range

When the room temperature is outside the measuring range, i.e. above 49 °C or below 0 °C, the limiting temperatures flash, e.g. "0 °C" or "49 °C".

If the temperature is below 0 °C and the controller is in heating mode and the current setpoint is not set to "OFF", then the control output Y10 or Y21 respectively will issue actuator control commands to heating equipment.

For all other cases, the control output is de-energized. The controller resumes Comfort mode after the temperature returns to within the measuring range.

4.10 DIP switches



Use the DIP switches on the inner side of the front panel to commission the basic controller applications prior to snapping it to the base.

| DIP switch number | 1 | 2 |
|--|------|------|
| <i>Application</i> | | |
| Single duct (factory setting) | OFF | n.a. |
| Single duct & electrical heater | ON | n.a. |
| DC 0...10 V output signal normal (factory setting) | n.a. | OFF |
| DC 0...10 V output signal inverted (see section 4.5) | n.a. | ON |

Note: During startup, the controller reloads the control parameter factory settings after each DIP switch settings change.

4.11 Control parameters

A number of control parameters can be readjusted to optimize control performance. These parameters can also be set during operation without opening the unit. In the event of a power failure, all control parameter settings are retained.

The control parameters are divided in two levels:

- “Service” level, and
- “Expert” level.

The “Service” level contains a small set of parameters to set up the controller for the HVAC system and to adjust the user interface. These parameters can usually be adjusted any time.

Change parameters in the “Expert” level only carefully, as they impact control performance and functionality of the controller.

Parameter setting

Enter only “Service” level

Change the parameters as follows:

1. Set the controller to Standby (⏻ *)
2. Press buttons + and - simultaneously for 3 seconds. Release and press button + again for 3 seconds within 2 seconds. The display shows “P01”. Continue at Step 3.

Enter “Service” and “Expert” level.

1. Set the controller to Standby (⏻ *)
2. Press buttons + and - simultaneously for 3 seconds. Release and press button - again for 6 seconds within 2 seconds. The display shows “P01” and service.

Adjust parameters

3. Select the required parameter by repeatedly pressing buttons + and -.
4. When you press buttons + and - simultaneously, the current value of the selected parameter starts to flash, which can be changed by repeatedly pressing buttons + or -.
5. When you again press buttons + and - simultaneously, the next parameter is displayed.
6. Repeat Steps 3 to 5 to display and change additional parameters.
7. All changes are saved and the controller returns to Standby 10 seconds after the last display or setting.


Reset parameters

The factory setting for the control parameters can be reloaded via parameter P71, by changing the value to “ON”, and confirming by pressing buttons + and - simultaneously. The display shows “8888” during reload.

Note

*) If one of the digital inputs is commissioned as window contact, and the contact is closed, the controller will switch to ECO mode and parameter setting will not be possible. Solution: open the window contact.

Control parameters

| # | Parameter | Factory setting | Setting range | RDU340 |
|----------------------|---|------------------|---|--------|
| Service Level | | | | |
| P01 | Control sequence (for application "single duct" only) | 1 (Cooling only) | 0:= Heating only 1:= Cooling only 2:= Manual H/C 3:= Auto changeover | ✓ |
| P02 | Mode selection via user operating mode button | 1 (Stb, Comf) | 1 = Stb, Comf 2 = Stb, Comf, Eco | ✓ |
| P04 | Selection of °C or °F | °C | (0) °C (1) °F | ✓ |
| P05 | Sensor calibration | 0.0 K | - 3 ... +3 K | ✓ |
| P06 | Standard temperature display | 0 (Room temp) | 0:= Room temperature 1:= Setpoint | ✓ |
| P07 | Additional user info | 0 (no display) | 0:= no display 1:= Temp in °C and °F | ✓ |
| P08 | Comfort basic setpoint | 21 °C | 5 ... 40 °C | ✓ |
| P09 | Minimum setpoint limitation for Comfort (WminComf) | 5 °C | 5 ... 40 °C | ✓ |
| P10 | Maximum setpoint limitation for Comfort (WmaxComf) | 35 °C | 5 ... 40 °C | ✓ |
| P11 | Heating setpoint for Energy Saving (WheatEco) | 15 °C | OFF, 5 °C...WcoolEco | ✓ |
| P12 | Cooling setpoint for Energy Saving (WcoolEco) | 30 °C | OFF, WheatEco...40 °C | ✓ |
| P14 | Keypad lock (Press the operating mode button  for 7 seconds to enable or disable the keypad lock) | 0 (Unlocked) | 0:= Unlocked 1:= Auto lock 2:= Manual lock | ✓ |

Note

- P01 is not available when the controller is commissioned as single duct with el. heater (DIP switch #1 = ON)
- P02 is not available when the controller is commissioned for manual heating/cooling changeover (P01=2)
- Parameter display depends on selected application and function


(x) Not available

| # | Parameter | Factory setting | Setting range | RDU340 |
|------------------------------|--|------------------------|---|--------|
| Expert Level | | | | |
| P30 | P-band/switching differential for heating mode | 2K | 0.5 ... 6 K | ✓ |
| P31 | P-band/switching differential for cooling mode | 1 K | 0.5 ... 6 K | ✓ |
| P33 | Dead zone in Comfort mode | 2 K | 0.5 ... 5 K | ✓ |
| P35 | Integral time | 5 min | 0...10 min | ✓ |
| P36 | Heating/cooling changeover switching point for cooling | 16 °C | 10...25 °C | ✓ |
| P37 | Heating/cooling changeover switching point for heating | 28 °C | 27...40 °C | ✓ |
| P38 | X1 functionality | 3 (Op mode switchover) | 0:= NA 1:= Ext/Return air temp 2:= Heat/cool changeover 3:= Operating mode switch 4:= Dewpoint monitor 5:= Enable electrical heater 6:= Alarm input | ✓ |
| P39 | Operating action for X1 if digital input | 0 (N.O.) | 0:= Normally open 1:= Normally closed | ✓ |
| P40 | X2 functionality | 2 (H/C c/o) | Same as P38 | ✓ |
| P41 | Operating action for X2 if digital input | 0 (N.O.) | 0:= Normally open 1:= Normally closed | ✓ |
| P51 | Flow temp limit floor heating | OFF | OFF, 10...50 °C | ✓ |
| P58 | "no function" | ON | | ✓ |
| P63 | Minimum output limitation air flow signal (0..10V) | 0% | 0...100% | ✓ |
| P64 | Maximum output limitation air flow signal (0..10V) | 100% | 0...100% | ✓ |
| P65 | Heating setpoint for Standby \odot (Wheat _{Stb}) | 8 °C | OFF, 5 °C...Wcool _{Stb} | ✓ |
| P66 | Cooling setpoint for Standby \odot (Wcool _{Stb}) | OFF | OFF, Wheat _{Stb} ...40 °C | ✓ |
| P69 | Temporary setpoint for Comfort mode | OFF | OFF:= Disabled ON := Enable | ✓ |
| P71 | Parameter reset Set value to ON and confirm by pressing the + and – buttons | OFF | OFF:= Idle ON: = Reset | ✓ |
| Diagnostic & Test | | | | |
| d01 | Application | Diagnose | 2P:= single duct 2PEL:= single duct & el. heater | ✓ |
| d02 | Status input X1 | Diagnose | 0:= Digital input not activated 1:= Digital input activated 0...49 °C = measured temp. value 00 := H/C input short 100:= H/C input open | ✓ |
| d03 | Status input X2 | Diagnose | Same as d02 | ✓ |

5 Handling

5.1 Mounting and installation

Mount the room controller on a recessed rectangular conduit box with 60.3mm fixing centers. Do not mount on a wall in niches or bookshelves, behind curtains, above or near heat sources, or exposed to direct solar radiation. Mount about 1.5 m above the floor.

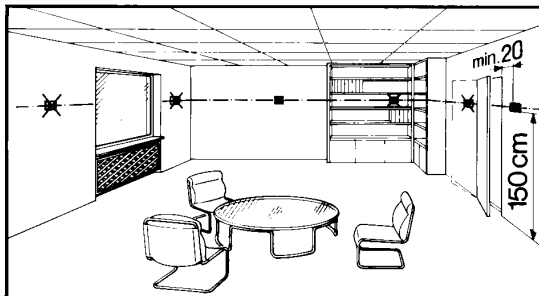

Mounting



- Devices must be mounted on clean, dry indoor place and not be exposed to dripping or splashing

Wiring



Warning

See the mounting instructions M3076 enclosed with the controller.

- Comply with local regulations to wire, protection and earth the thermostat.
- Danger of injury and fire from short-circuit. A short-circuit can happen because the device has no internal fuse for the supply lines to actuators and electrical heater. Make sure that a circuit breaker with a rated current of no more than 10 A precedes the AC 24 V mains supply line and the 230 V line for the relay, before you use the device.
- Danger of injury and danger of fire from overheating. Overheating of the wires used for power supply (G, Go, N) and electrical heater (L-Y21) can start a fire and the insulation can be damaged. Make sure, that the cross section of the wires used for power supply (G, Go, N) and electrical heater (L-Y21) is adapted to the preceding overload protection elements (10 A) under all circumstances. Comply under all circumstances with local regulations.
- Isolate the cables of SELV inputs X1-M/X2-M if the conduit box carries AC 230 V mains voltage.
- Inputs X1-M or X2-M of different units (e.g. summer/winter switch) may be connected in parallel with an external switch. Consider overall maximum contact sensing current for switch rating.
- Disconnect from supply before opening the cover

Warning



Commissioning

Set the controller application via the DIP switches before snapping the front panel on the mounting base.

After power is applied, the controller carries out a reset during which all LCD segments flash indicating that the reset was correct. After the reset, which takes about 3 seconds, the controller is ready for commissioning by qualified HVAC staff. The control parameters of the controller can be set to ensure optimum performance of the entire system (see “Set control parameters”).

Control sequence

- The control sequence may need to be set via parameter P01 depending on the application. The factory setting for the single duct application is “Cooling only”.

- Calibrate sensor
- Recalibrate the temperature sensor if the room temperature displayed on the controller does not match the room temperature measured. To do this, change parameter P05.
- Setpoint and range limitation
- We recommend to review the setpoints and setpoint ranges (parameters P08...P12) and change them as needed to achieve maximum comfort and save energy.

5.2 Operating Instructions

See the operating instructions B3076 enclosed with the controller.

5.3 Disposal



The device is classified as waste electronic equipment in terms of the European Directive 2002/96/EC (WEEE) and should not be disposed of as unsorted municipal waste.

The relevant national legal rules are to be adhered to. Regarding disposal, use the systems setup for collecting electronic waste.

Observe all local and applicable laws.


7 Mechanical design

The controller consists of 2 parts:

- Front panel accommodating the electronics, operating elements and built-in room temperature sensor.
- Mounting base with the power electronics.


The rear of the mounting base contains the screw terminals. The base fits on a rectangular conduit box with 60.3 mm fixing centers. Slide the front panel in the mounting base and snap on.

Operation and settings

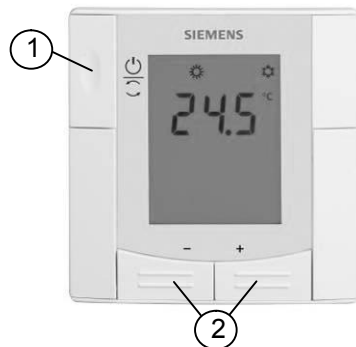

1. Operating mode selector/Standby
2. Adjust setpoint and control parameters

Display



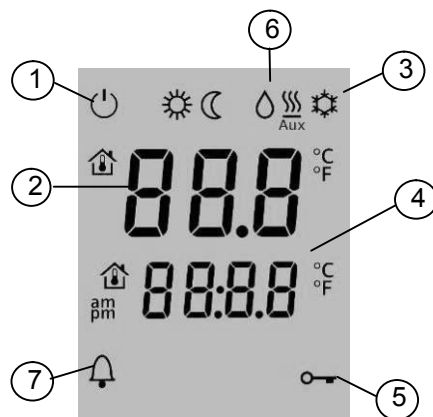


1. Operating mode
 - ⏻ Standby / protected mode
 - ☀ Comfort mode
 - ⌚ Energy Saving mode

2. Display room temperature, setpoints and control parameters.
 - 🏠 Symbol used to display the current room temperature
3. Heating/cooling mode
 - ☀ Cooling mode
 - ☀ Heating mode,
 - ☀ Aux Electrical heater active
4. Additional user information
5. Keypad lock active
6. Condensation in room (dewpoint sensor active)
7. Indicate alarm or reminder




7.1 Dimensions

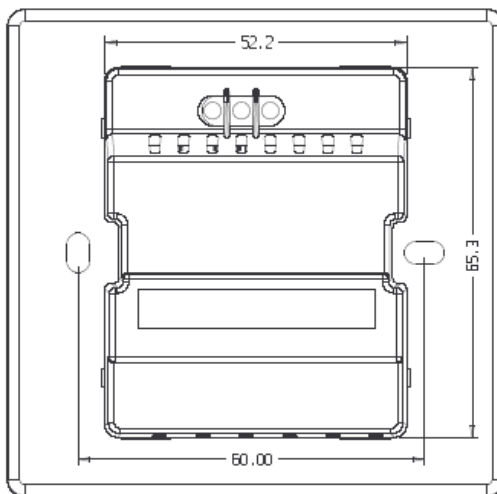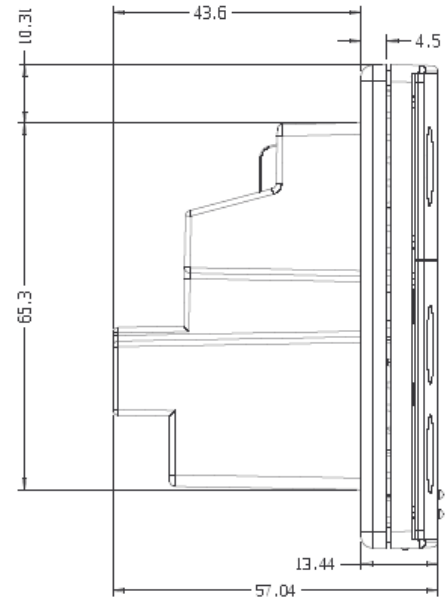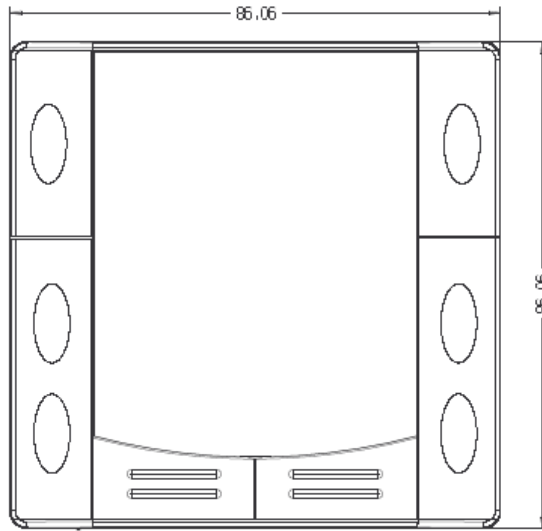Dimensions in mm



8 Technical data

| | | | |
|-------------------------------------|--|-----------------------------|------------------------|
| ⚠ Power supply | Operating voltage | SELV AC 24 V ±20 % | |
| | Frequency | 50/60 Hz | |
| | Power consumption | Max. 8 VA | |
| ⚠ Warning | No internal fuse | | |
| | External preliminary protection with max. C 10 A circuit breaker required in all cases | | |
| Outputs | Control output Y10-G0 | SELV DC 0...10 V | |
| | Resolution | 39 mV | |
| | Current | Max. ±1 mA | |
| | Control output Y21-L (N.O.) | AC 230 V | |
| | Rating | Max. 5(2) A | |
| ⚠ Warning | No internal fuse | | |
| | External preliminary protection with max. C 10 A circuit breaker in the supply line required under all circumstances | | |
| Inputs | Multifunctional input X1-M/X2-M | | |
| | Temperature sensor input: Type | QAH11.1 (NTC) | |
| | Digital input: action | Operating | Selectable (N.O./N.C.) |
| | Contact sensing | SELV DC 0...5 V/max 5 mA | |
| | Insulation against mains voltage (SELV) | 4 kV, reinforced insulation | |
| | Function input: | Selectable | |
| | External temperature sensor, heating/cooling changeover sensor, operating mode switchover contact, dewpoint monitor contact, enable electrical heater contact, alarm contact | | |
| | Switching differential, adjustable | | |
| | Heating mode | (P30) | 2 K (0.5...6K) |
| | Cooling mode | (P31) | 1 K (0.5...6K) |
| Setpoint setting and range | | | |
| ☀ Comfort mode | (P08) | 21°C (5...40 °C) | |
| ⌚ Energy Saving mode | (P11-P12) | 15°C/30°C (OFF, 5...40 °C) | |
| ⏸ Standby | (P65-P66) | 8°C/OFF (OFF, 5...40 °C) | |
| Multifunctional input X1/X2 | | | |
| Input X1 | Selectable 0...6 | | |
| | 3: (P38) operating mode switchover | | |
| Input X2 | 2: (P40) heating/cooling changeover sensor | | |
| Multifunctional input X1/X2 | | | |
| | Selectable 0...6 | | |
| Input X1 | Factory setting = 3 (P38) | Operating mode switchover | |
| Input X2 | Factory setting = 2 (P40) | Heat/cool changeover sensor | |
| Built-in room temperature sensor | | | |
| Measuring range | 0...49 °C | | |
| Accuracy at 25 °C | < ± 0.5 K | | |
| Temperature calibration range | ± 3.0 K | | |
| Settings and display resolution | | | |
| Setpoints | 0.5 °C | | |
| Current temperature value displayed | 0.5 °C | | |

| | | |
|---------------------------------|---|---|
| Environmental conditions | Operation | As per IEC 721-3-3 |
| | Climatic conditions | Class 3K5 |
| | Temperature | 0...+50 °C |
| | Humidity | <95 % r.h. |
| | Transport | As per IEC 721-3-2 |
| | Climatic conditions | Class 2K3 |
| | Temperature | -25...+60 °C |
| | Humidity | <95 % r.h. |
| | Mechanical conditions | Class 2M2 |
| | Storage | As per IEC 721-3-1 |
| Climatic conditions | Class 1K3 | |
| Temperature | -25...+60 °C | |
| Humidity | <95 % r.h. | |
| Standards |  conformity | |
| | EMC directive | 2004/108/EC |
| | Low-voltage directive | 2006/95/EC |
| |  C-tick conformity to | |
| | EMC emission standard | AS/NSZ 4251.1:1999 |
| |  Reduction of hazardous substances | 2002/95/EC |
| | Product standards | |
| | Automatic electrical controls for household and similar use | EN 60730-1 |
| | Special requirements for temperature-dependent controls | EN 60730-2-9 |
| | Electronic control type | 2.B (microdisconnection on operation) |
| Electromagnetic compatibility | | |
| Emissions | IEC/EN 61000-6-3 | |
| Immunity | IEC/EN 61000-6-2 | |
| Protective class | II as per EN 60730 | |
| Pollution class | Normal | |
| Degree of protection of housing | IP 30 to EN 60529 | |
| General | Connection terminals | Solid wires or prepared stranded wires 1 x 0.4...2.5 mm ² or 2 x 0.4...1.5 mm ² |
| | Housing front color | RAL 9003 white |
| | Weight | 0.220 kg |

Index

A

| | |
|--|----|
| Adapter plate | 6 |
| Alarm | 18 |
| Automatic H/C changeover | 12 |
| Automatic heating/cooling changeover | 14 |

C

| | |
|--------------------------|----|
| Calibrate sensor | 24 |
| Comfort mode | 9 |
| Commissioning | 23 |
| Control output | 5 |
| Control parameters | 20 |
| Cooling mode | 14 |

D

| | |
|--|----|
| DC 0..10 V control signal | 17 |
| Dewpoint | 18 |
| Digital input | 18 |
| DIP switches | 19 |

E

| | |
|--|--------|
| Electrical heater | 11, 16 |
| Enable electrical heater | 16 |
| Enable/disable the electrical heater | 18 |
| Energy Saving | 9 |
| Expert level parameters | 20 |
| External/Return air temp. | 18 |
| External/return temperature sensor | 12 |

F

| | |
|---|----|
| Floor temperature limitation function | 13 |
|---|----|

H

| | |
|----------------------------|----|
| Heat/cool changeover | 18 |
| Heating mode | 14 |
| Housing color | 5 |

I

| | |
|----------------------------|---|
| Integral action time | 8 |
|----------------------------|---|

K

| | |
|--------------|----|
| Keypad | 12 |
|--------------|----|

M

| | |
|---|----|
| Manually select heating or cooling mode | 14 |
| Min / Max air flow | 13 |
| Modulating output | 14 |
| Mounting and installation | 23 |
| Multifunctional inputs | 18 |

O

| | |
|-------------------------------------|----|
| On/off control output signals | 17 |
| Operating mode button | 9 |
| Operating mode input | 9 |
| Operating mode switchover | 18 |
| Operating voltage | 5 |
| Output signal inversion | 13 |

P

| | |
|-------------------------|----|
| Parameter setting | 20 |
| Proportional band | 8 |

R

| | |
|------------------------|----|
| Remote heating/ | 12 |
| Reset parameters | 20 |

S

| | |
|-------------------------------------|----|
| Sensor input | 18 |
| Service level | 20 |
| Setpoint and range limitation | 24 |
| Setpoint limitation | 10 |
| Single duct | 11 |
| Standby /Protection mode | 9 |
| Switching differential | 8 |

T

| | |
|--------------------------------|----|
| Temperature out of range | 19 |
| Temporary setpoint | 10 |

Siemens Switzerland Ltd.
Building Technologies Division
International Headquarters
Gubelstrasse 22
CH-6301 Zug
Tel. +41 41-724 24 24
Fax +41 41-724 35 22
www.siemens.com/sbt

© 2008-2014 Siemens Switzerland Ltd.
Subject to change