

- 2-wire FTT-10A LONWORKS® bus interface
- LonMark® certified
- Easily-accessible service button and service LED
- Application can be configured to user-specific needs via LNS™-based plug-in
- Applications can be downloaded via LONWORKS into flash memory (thus increasing flexibility)

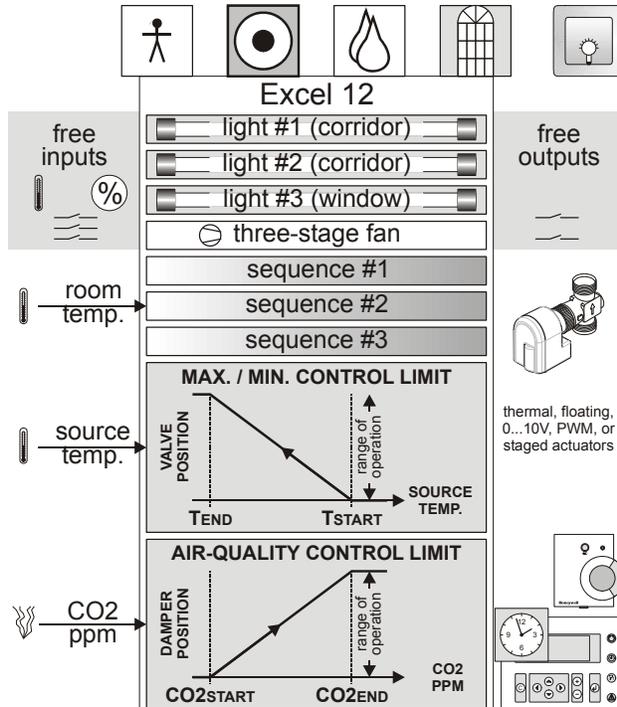


Fig. 1. Functional overview

## FEATURES

- Two-in-one controller for HVAC and lighting reduces hardware costs and engineering effort (one LONWORKS® node instead of two)
- HVAC application supports three sequences (heat, cool or change-over) and min. / max. control limits and air-quality control
- Light application supports three lamps. Up to two of the three light loops can be constant light control loops. Light switching can be done depending on light level and occupancy (configurable via plug-in)
- Unused inputs can be utilized for monitoring via the LONWORKS network
- Unused digital outputs (relay or triacs) can be switched via LONWORKS
- Different kinds of HVAC actuators are supported (PWM, thermal, staged, floating, or analog actuators)
- Inputs / outputs can be freely assigned
- DIN rail (wiring cabinet / fuse box) mounting and wall-mounting supported
- Different power supply variants available
- Optional terminal protection covers for wall mounting
- Optional swivel label holders for wiring information

## GENERAL

The Excel 12 FCU + Light application is LONMARK® certified, and can thus be used in all open LONWORKS® environments.

Excel 12 supports the following LONMARK® objects:

- one Node Object (LONMARK® object #0)
- one Space Comfort Controller Fan Coil Object (profile #8501)
- three Lamp Actuator Objects (profile #3040)
- one Occupancy Sensor Object (profile #1060)
- two Open Loop Actuator Objects (LONMARK® object #3)

A variety of hardware models with different power supplies are available. Page 6 provides a detailed overview of the available models.

Select the model fitting your particular needs.

The application can be downloaded into the Excel 12's FLASH memory.

Honeywell's LNS™ plug-in allows you to configure the application to match your specific requirements (e.g., configure the heating / cooling sequences, the light functionality and usage of otherwise unused inputs for monitoring according to your needs).

The Excel 12 controller is designed for maintained zones.

## APPLICATION

The Excel 12 Fan Coil Unit (FCU) + Light application supports three HVAC sequences (HEAT, COOL, or CHANGEOVER) with control limits, air-quality control, free inputs, free outputs, and up to three lights.

The application is delivered together with the plug-in and must be downloaded into the Excel 12 controller's flash memory during start-up. The user can customize the application using Honeywell's LNS™ plug-in with CARE or any LNS™ tool (e.g., LonMaker for Windows™). Customizations can be saved / reloaded for easy configuration of multiple devices.

## Application Overview

### HVAC Application:

- Three sequences configurable for HEAT, COOL, and CHANGEOVER
- Support of thermal actuators, floating actuators, PWM, 0...10 Vdc, and staged output via triac outputs or relay outputs
- 3-stage fan via triac outputs or relay outputs
- Binary inputs for condensation, occupancy sensor, window contact, etc.
- Up to two limits (any combination of temperature limits and/or air-quality limits)
- Min./max. limits can be used to limit the sequence output according to you requirements. The limits are valid only in the occupancy mode.

The example below shows that a heating valve will be opened as soon as the source temperature drops below  $T_{Start}$ .  $T_{Start}$ ,  $T_{End}$  and the range of operation can be configured using the plug-in.

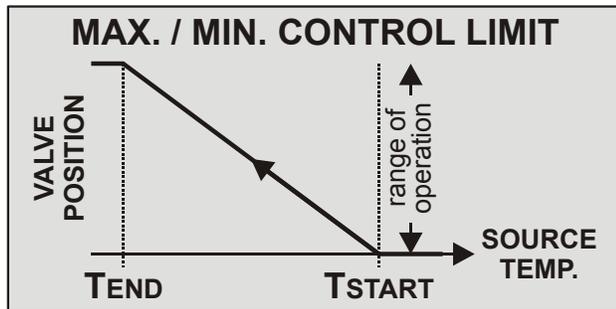


Fig. 2. Minimum Heating Example

**NOTE:** The min./max. limits have a higher priority than the normal control output.

- The air-quality can be controlled by opening a damper in dependence on the CO2 level. The CO2 ramp is defined by  $CO2_{START}$ ,  $CO2_{END}$ , and the range of operation (entered using the plug-in).

### Example:

- $CO2_{START}$  = 1000 ppm
- $CO2_{END}$  = 2000 ppm
- range of operation = 50%

The damper starts opening as soon as the level of 1000 ppm is reached. The maximum value (range of operation) is reached at position  $CO2_{END}$ .

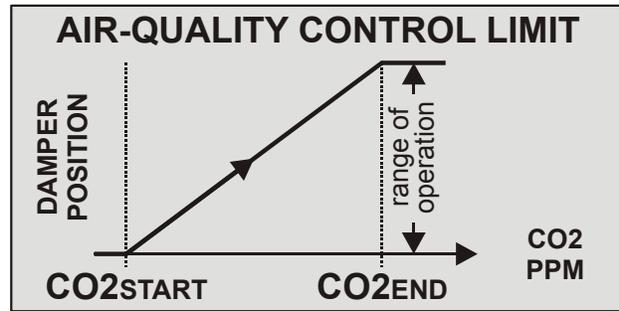


Fig. 3. Air-quality control (example)

### Example:

- sequence 1: heating via radiator
- sequence 2: cooling via damper
- setpoint: 20 °C
- CO2 control for sequence 2
- $CO2_{START}$  = 1000 ppm
- $CO2_{END}$  = 1500 ppm
- range of operation = 50%

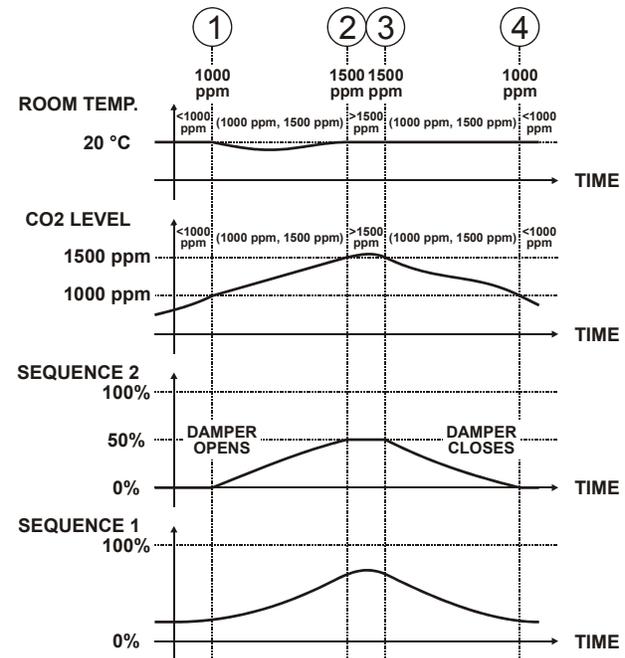


Fig. 4. Example

### Before ①:

- CO2 level is OK → room temperature control, only
- Temperature at 20 °C
- ① **CO2 level rises above  $CO2_{START}$ :**
- CO2 level is too high, CO2 control starts with priority over the temperature control
- Damper opens, room temperature drops
- Temperature drops to below 20 °C → heating sequence starts heating

② **CO2 level rises above CO2<sub>END</sub>:**

- Damper reaches max. range of operation
- Heating sequence achieves room temperature of 20 °C

③ **CO2 level drops below CO2<sub>END</sub>:**

- Damper starts closing
- Room temperature is maintained at setpoint value

④ **CO2 level drops below CO2<sub>START</sub>:**

- CO2 level falls below CO2<sub>START</sub> → room temperature control, only
- Temperature is maintained at 20 °C

**NOTE:** The temperature limitation and the air-quality control have priority over the temperature control.

- Relative or absolute temperature setting via wall module.

**Light Application:**

- Three times ON / OFF switching dependent on:
  - Occupancy
  - Internal light level: The light will be switched ON if the light level drops below the "dark level" and it will be switched OFF if it increases above the "bright level". The "dark level" and the "bright level" can be configured via the plug-in.

**NOTE:** Do not select the "Auto Off Delay Timer" checkbox insofar as this functionality is currently not supported.

- Manual switching (via hardwired switches or LONWORKS® wall module)
- Two times dimming / constant light control for two lights with just one sensor.  
Dimming / constant light control is performed via analog outputs (this requires an HFD [High-Frequency Device] for dimming with 1...10 Vdc input). An additional relay is required to switch the light ON/OFF.  
Constant light control helps to save additional energy. Normally, fluorescent tubes lose about 15% of their illumination over their lifecycle. To compensate for this, rooms are therefore usually dimensioned with 15% more illumination than actually necessary. With constant light control, the light level needs to be only 85% in order to achieve the required brightness. Further savings and comfort can be achieved if there is a constant light level in the room and the light is automatically dimmed when more outside light enters. The Excel 12 supports window correction in order to reduce the light output of the window light. This functionality can be configured via the plug-in.
- Grouping of lights, e.g., switch three lights via a single pushbutton.
- Soft ON/OFF switching for dimmable lamps.
- Light sensor: The light intensities typically encountered in everyday life are listed in Table 1, while Table 2 presents the recommended light levels in various environments as set forth by DIN5035.

**NOTE:** One lux is equivalent to 0.0929 foot-candle.  
Refer also to the plug-in help information for details.

**Table 1. Typical light intensities**

ambient conditions	intensity (lux)
summer day, cloudless	100,000
summer day, cloudy	20,000
winter day, cloudy	400
night, with full moon	0.3

**Table 2. Recommended light intensities (DIN5035)**

area	intensity (lux)
storage rooms	50...200
washrooms, cloakrooms, technical rooms, corridors	100
office rooms (near windows)	300
office rooms (minimal outside light)	500
open-plan office rooms	750
schools (daytime)	300
night schools	500
gymnasiums	200
show rooms	300
commercial kitchens	500

**NOTE:** The intensity level depends on the sensor type and the mounting location.

**NOTE:** The indoor light sensor must be suitable for sensing artificial light, and should be mounted more towards the corridor.

**Free Inputs for Monitoring:**

- Unused inputs can be used for monitoring. This application supports the following free inputs:
  - one temperature input (NTC20k)
  - one percentage input (0..10 V or 2..10 V)
  - three binary inputs
- The input values are communicated via nvoXL12Status.

**Free Binary Outputs Can Be Switched Via LonWorks:**

- Up to two unused digital outputs (triac or relay outputs) may be switched via LONWORKS® (nviFreeOutput[0/1]).

**Occupancy Modes:**

- *Occupied mode:* The Excel 12 operates according to the "occupied" heating and cooling set-points.
- *Bypass:* After the bypass button of a hardwired wall module has been pressed or when corresponding data is received via the LONWORKS® network, the Excel 12 operates temporarily according to the "occupied" heating and cooling set-points. When the bypass time has elapsed, the controller reverts to scheduled mode. The bypass time can be configured via plug-in.
- *Standby mode:* The Excel 12 operates according to the "standby" heating and cooling set-points.
- *Unoccupied mode:* The Excel 12 operates according to the "unoccupied" heating and cooling set-points.

- **Occupancy sensor:** The occupancy sensor is used for the HVAC and light application. Hardwired and LONWORKS® occupancy sensors are supported. The occupancy sensor determines the effective occupancy mode during scheduled occupied periods (time program with occupancy schedule runs on a different controller connected to the LONWORKS® network). Depending upon the actual occupancy sensor state, the effective mode will be either "occupied" or "standby."

**Wall Modules:**


- LONWORKS® wall modules
- Hardwired wall modules (e.g., T7460, T7560)
- Wireless wall modules (e.g., W7070+T7270 or RT7070)

**Master / Slave Functionality:**


The master / slave functionality allows easy adaptation to changed room usage.

The sequences and the outputs of the slave controller must be configured in the same way as the master (e.g., sequence 1: heat, actuator type: thermal).

The temperature limit functionality and the air-quality functionality shall not be used in the slave controller if there is an EnergyHoldOff binding from the slave to the master.

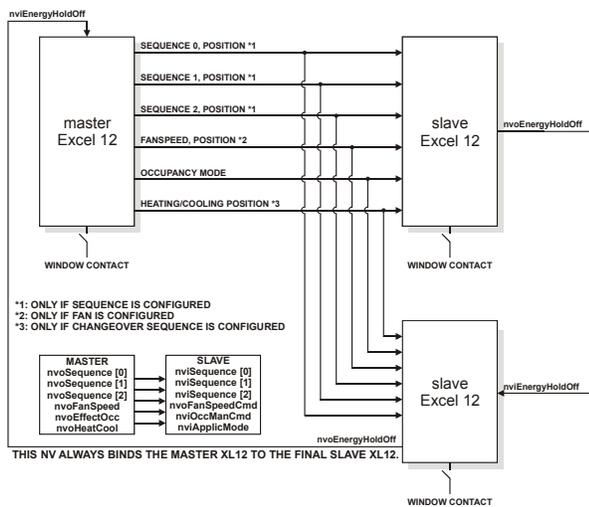


**Fig. 5. Master/slave functionality and window contact**

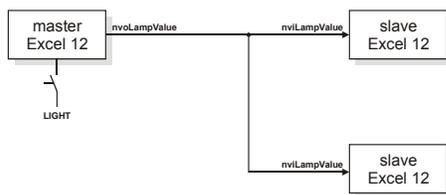

**Fig. 6. All lights switched via master pushbutton**

**NOTE:** Binding via LONWORKS results in a short delay between the switching of the different lamps.

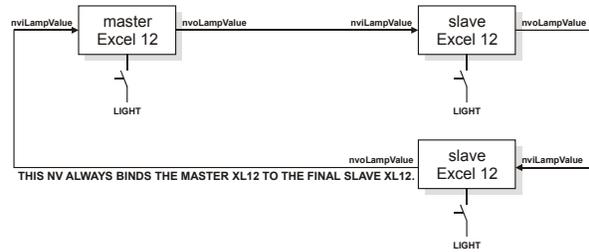

**Fig. 7. All lights switched on via any pushbutton**

**NOTE:** This binding shall not be used for applications involving dimming or constant light control. Binding via LONWORKS results in a short delay between the switching of the different lamps. Pressing the pushbutton repeatedly and rapidly may cause toggle effects.

**Benefits of Integrated Room Control**

The Excel 12 functionality provides you with a number of significant advantages:

**Considerable Reduction in Energy Consumption:**

- 25...75% savings on electrical energy consumption for illumination.
- Decreased heat generated by electric lights, thus reducing cooling energy requirements.

**Increased Convenience:**

- Occupancy sensor switches the light ON/OFF automatically.
- Constant light control always provides the correct lighting.
- Optional air-quality control in the occupancy mode.
- Wireless control via ZAPP (see ZAPP System Engineering, EN0B-0286GE51).

**Increased Flexibility:**

- Flexible room usage if a LONWORKS® wall module or ZAPP (wireless remote control) is used.

**Reduced Engineering Effort / Expenses:**

- Just one LONWORKS® node (instead of two) is required to cover HVAC and Light.
  - + reduced engineering and installation effort (e.g., wiring, binding, commissioning, etc.)
  - + reduced integration effort
  - + lower cost due to reduced number of LNS™ credits
  - + lower hardware total loop costs

## Interoperability

See also section “Approvals, Certifications, and Standards” on page 8.

## Device Configuration

The controller is configured using Honeywell's LNS™ plug-in. The plug-in can be started from CARE 4.0 or any LNS™ tool (e.g., LonMaker for Windows™).

## LONMARK® Objects Network Variables

The Excel 12 supports the following LONMARK® objects:

- one node object (see Fig. 11)
- one space comfort controller object (#8501 SCC – Fan Coil) (see Fig. 12)
- three lamp actuator objects (#3040) (see Fig. 8)
- one occupancy sensor object (#1060) (see Fig. 9)
- two open loop actuator objects (#3) (see Fig. 10)

See also Table 6 through Table 9 on page 9.

## Lamp Actuator Object

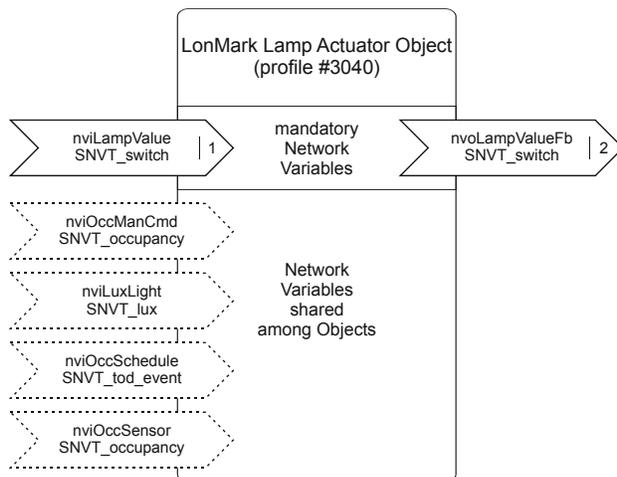


Fig. 8. Lamp Actuator Object

## Occupancy Sensor Object

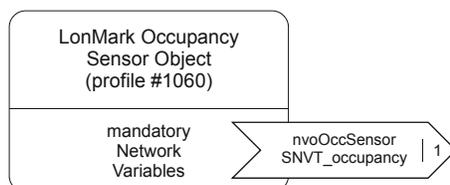


Fig. 9. Occupancy Sensor Object

## Open Loop Actuator Object

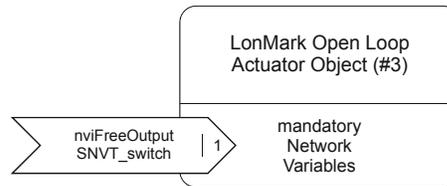


Fig. 10. Open Loop Actuator Object

## Node Object

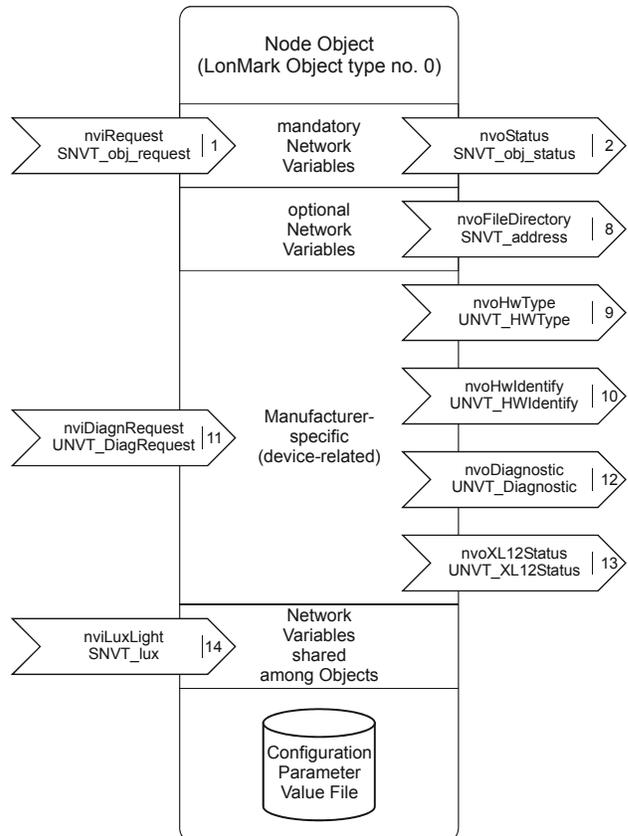


Fig. 11. Node Object

### Space Comfort Controller Object

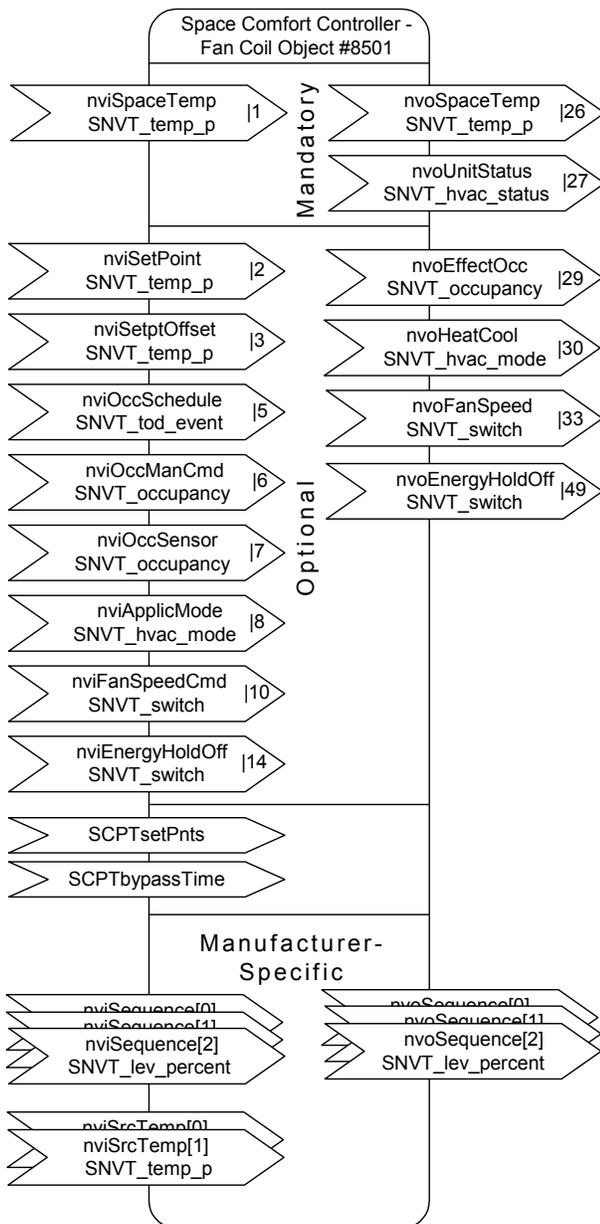


Fig. 12. FCU Controller Object

### LONWORKS® Network Interface

The Excel 12 communicates within the LONWORKS® network at a rate of 78 kbs via an FTT-10A Free Topology Transceiver, which provides transformer isolation; the bus wiring is thus insensitive to polarity.

Devices so equipped can be wired in daisy chain, star, loop, or any combination thereof as long as the max. wire length requirements are met. The recommended configuration is a daisy chain with two termination modules. This layout allows for max. bus length and has the highest communication reliability, particularly when adding on to an existing bus. Refer also to <http://www.echelon.com>

### Configuration and Binding

Configuration is performed using Honeywell's LNS™ plug-in, which can be started from CARE 4.0 or any LNS™ tool (e.g., LonMaker for Windows™). Likewise, binding is performed using CARE 4.0 or any LNS™ tool.

### LONWORKS® Service Button and LED

All models feature a LONWORKS® service button (accessible from the outside on top of the module).

The service pin message is broadcast:

- whenever the LONWORKS® service button is pressed;
- after each reset due to power-up, software reset;
- if a hardwired pushbutton for lighting is pushed for more than 10 seconds.

See also Excel 12 Installation Instructions (EN1B-0201GE51) for more-detailed information.

All models feature a LONWORKS® service LED for commissioning and troubleshooting. The service LED displays numerous different behaviors indicating various module states for use in troubleshooting (see also Excel 12 Installation Instructions).

### Models

#### Long and Short Housings

Models powered with line power (W7704A, B, and D1016) are equipped with a built-in transformer and feature a long housing (W X L X H = 180 X 76 X 110 mm).

Models powered with 24 Vac (W7704C, and D1008) require an external 24 Vac power supply and feature a short housing (W X L X H = 126 X 76 X 110 mm).

### Binary Inputs

The Excel 12 is equipped with four dry-contact binary inputs. The binary inputs are fast (the signal must be stable for at least 25 ms). These inputs are often used for light pushbuttons.

### Binary Outputs

The triac outputs or relay outputs can be configured for different functions.

Table 3. Overview of Excel 12 models

	short housing	long housing	24 Vac	230 Vac	binary input 1	binary input 2	binary input 3	binary input 4	relay 1 (N-O)	relay 2 (N-O)	relay 3 (N-O)	relay 4 (C-O)	relay 5 (C-O)	triac 1	triac 2	triac 3	triac 4	triac 5	triac 6	wall module LED output	A11 (NTC20k + V)	A12 (NTC20k)	A13 (fan speed / bypass)	A14 (setpoint)	A15 (NTC20k + V)	A16 (NTC20k)	A17 (NTC20k + V)	AO1 (0...10 Vdc)	AO2 (0...10 Vdc)
W7704A1004* <sup>1</sup>		X		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
W7704B1002* <sup>1</sup>		X		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
W7704C1000* <sup>1</sup>	X		X		X	X	X							X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
W7704D1008	X		X		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
W7704D1016		X		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
W7704F1003* <sup>1,2</sup>		X		X	X	X	X	X	X	X	X	X														X	X	X	X

\*<sup>1</sup> These hardware versions have been discontinued.  
\*<sup>2</sup> The hardware variant W7704F1003 is cost-optimized for light control and does not support hardwired wall modules.

**NOTE:** The support of the functionalities listed above and the availability, via LONWORKS, of information pertaining to a given Excel 12 module depend upon the application and configuration of that module.

**Relay Outputs**

The Excel 12 is equipped with up to two change-over (C-O) relays and up to three normally-open (N-O) relays.

**Hardware Limits**

- In order to ensure a reliable contact, a min. current of 50 mA is required.
- The normally-open contacts are designed for a max. continuous current of 6 A. The normally-closed contacts are designed for a max. continuous current of 1 A.
- In order to reduce the build-up of heat in the housing, the max. combined allowable current flowing through all relays simultaneously is 24 A (continuous).
- The max. peak in-rush current (20 ms) at the normally-open contact is 80 A.

**Triac Outputs**

The Excel 12 is equipped with up to six triac outputs.

**Hardware Limits for Excel 12 with Line Power Supply**

- Low signal: 0 V; high signal: 24 Vac
- **Max. 250 mA** continuous current in sum for all triac outputs together
- 550 mA for max. 10 sec.
- $\cos \varphi > 0.5$

**Hardware Limits for Excel 12 with 24 Vac Power Supply**

- Low signal: 0 V; high signal: 24 Vac
- **Max. 500 mA** continuous current in sum for all triac outputs together
- 800 mA for max. 10 sec.
- $\cos \varphi > 0.5$

**NOTE:** For controlling thermal actuators, we recommend using the 24 Vac models, which provide more current.

**Analog Outputs**

The Excel 12 is equipped with up to two 0...11 Vdc analog outputs each of which can drive a max. of ±1.1 mA.

**Analog Inputs**

The Excel 12 is equipped with up to 7 analog inputs, all of which can be configured as slow binary inputs (in which case the signal must be stable for at least 1.25 sec) for the detection of a slow signals (e.g., from a window contact).

Table 4. Analog input usage (with wall modules)

analog input	voltage	NTC	wall module
AI1	X	X	e.g., CO <sub>2</sub> or humidity
AI2		X	room temperature <sup>1</sup>
AI3			fan speed or bypass <sup>2</sup>
AI4			setpoint <sup>3</sup>
AI5	X	X	e.g., CO <sub>2</sub> or humidity
AI6		X	
AI7	X	X	e.g., CO <sub>2</sub> or humidity

<sup>1</sup> For all NTC inputs, temperatures of ≤ -50...-45 °C are interpreted as being due to a sensor break, and temperatures of ≥ +145...+155 °C are interpreted as being due to a sensor short-circuit.

<sup>2</sup> A contact open for ≥ 10 seconds is interpreted as a sensor failure.

<sup>3</sup> A resistance of > 15k Ω is interpreted as being due to a sensor break, a resistance of < 100 Ω is interpreted as being due to a sensor short-circuit.

## Power Consumption and Heat Dissipation

Table 5. Power consumption and heat dissipation

model	power consumption	heat dissipation
<b>W7704D1008</b>	4.0 VA	2.5 W
<b>W7704D1016</b>	3.5 W	3.5 W

## Accessories

### Swivel Label Holders

For short or long housings (required for modules equipped with manual override switches).

- 24 Vac models (short), order no.: **XAL\_LAB\_S**
- line power supply models (long), order no.: **XAL\_LAB\_L**

### Terminal Protection Covers

For short or long housings (required for wall/ceiling mounting).

- 24 Vac models (short), order no.: **XAL\_COV\_S**
- line power supply models (long), order no.: **XAL\_COV\_L**

### LONWORKS® Termination

One or two LONWORKS® terminations are required, depending on the given LonWorks bus layout.

The following LONWORKS® termination module is available:

- LONWORKS® connection / termination module (can be mounted on DIN rails and in fuse boxes), order no.: **XAL-Term2**

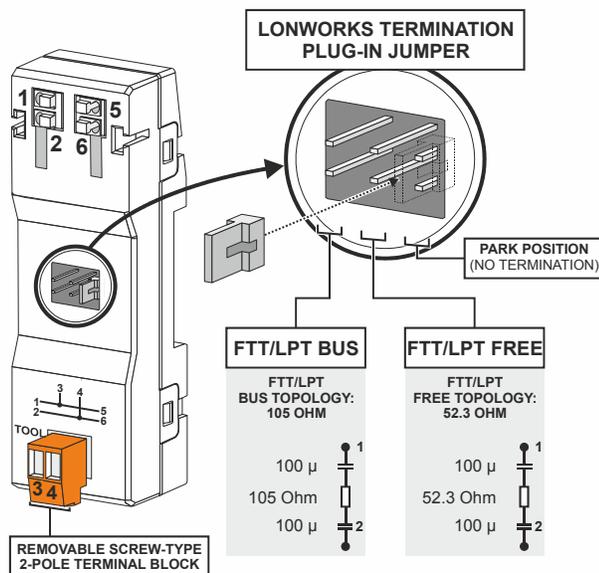


Fig. 13. LonWorks® connection and termination module

## Approvals, Certifications, and Standards

### Approvals and Certifications

- CE-approved
- Certified as per LonMark® Application Layer Guidelines V 3.3, thus interoperable with all other devices in open LONWORKS® networks (incl. 3<sup>rd</sup>-party devices)
- EUBAC-certified as follows:

W7704D1008:  020896

### Classification according to EN60730-1

Environmental conditions: For use in home (residential, commercial, and light-industrial) environments

Pollution degree: Class 2

Protection against shock: Class 0 (without terminal covers)  
Class II (with terminal covers)

Software class: Class A

### Classification according to EN60529

(Degree of Protection Provided by Enclosures)

Without terminal covers: IP20

With terminal covers: IP30

### Ambient Environmental Limits

Operating temperature: 0 ... +50 °C at 5...90% r.H.

Storage temperature: -30 ... +70 °C at 5...90% r.H.

### W7704D1008 Temperature CA

Chilled ceiling: 0.5 K

Electric convector: 0.3 K

Electric floor heating: 1.2 K

Radiator heating: 0.5 K

FCU heating mode: 0.4 K

FCU cooling mode: 0.2 K

(min. Temperature Control Accuracy values requested by EUBAC: ≤ 1.4 K for hot water radiator heating, fan coil unit, VAV, and chilled ceiling applications; ≤ 1.8 K for water floor heating, electric convector, electric floor heating, and electric ceiling heating applications)

### Applicable Literature

- Excel 12 Installation Instructions (EN1B-0201GE51)
- Excel 50/500 LONWORKS® Mechanisms (EN0B-0270GE51)
- ZAPP System Engineering (EN0B-0286GE51)
- XL12 / XL Smart I/O Plug-in Installation Guide (EN0B-0294GE51)
- Honeywell's XL12 / Excel Smart I/O plug-in help

## NETWORK INTERFACE

The following tables list the NV's associated with the various LONMARK® objects serving as network interfaces to the Excel 12 FCU + Light application.

**Table 6. NV's associated with Space Comfort Controller FCU Object (profile # 8051)**

name	type	heartbeat
nviSpaceTemp	SNVT_temp_p	yes
nviSetPoint	SNVT_temp_p	no
nviSetptOffset	SNVT_temp_p	yes
nviOccSchedule	SNVT_tod_event	yes
nviOccManCmd	SNVT_occupancy	no
nviOccSensor	SNVT_occupancy	yes
nviApplicMode	SNVT_hvac_mode	yes
nviFanSpeedCmd	SNVT_switch	no
nviEnergyHoldOff	SNVT_switch	yes
nviEmergOverride	SNVT_hvac_emerg	no
nviSrcTemp[2]	SNVT_temp_p	yes
nviSequence[3]	SNVT_lev_percent	yes
nvoSequence[3]	SNVT_lev_percent	yes
nvoSpaceTemp	SNVT_temp_p	yes
nvoUnitStatus	SNVT_hvac_status	yes
nvoEffectOcc	SNVT_occupancy	no
nvoHeatCool	SNVT_hvac_mode	yes
nvoFanSpeed	SNVT_switch	yes
nvoEnergyHoldOff	SNVT_switch	yes

**Table 7. NV's associated with Occupancy Sensor Object (profile #1060)**

name	type	heartbeat
nvoOccSensor	SNVT_occupancy	yes

**Table 8. NV's associated with Lamp Actuator Object (profile #3040)**

name	type	heartbeat
nviLampValue[3]	SNVT_switch	no
nvoLampValueFb[3]	SNVT_switch	no

**Table 9. NV's associated with the Node Object (LONMARK® object #0)**




name	type	heartbeat
nviRequest	SNVT_obj_request	no
nvoStatus	SNVT_obj_status	yes
nvoFileDirectory	SNVT_address	no
nviDiagnRequest	UNVT_DiagRequest	no
nvoDiagnostic	UNVT_Diagnostic	no
nvoXL12Status	UNVT_XL12Status	no
nviLuxLight	SNVT_lux	no
nvoHwType	UNVT_HwType	n/a
nvoHwIdentify	UNVT_HWIdentify	n/a

**Table 10. NV's associated with Open Loop Actuator Object (LONMARK® object #3)**

name	type	heartbeat
nviFreeOutput[2]	SNVT_switch	no

**Note:** Device Resource Files are included in the plug-in package and facilitate the handling of UNVTs

## DIMENSIONS

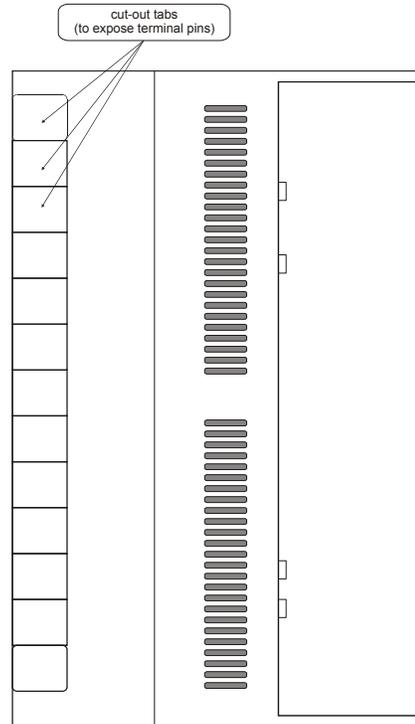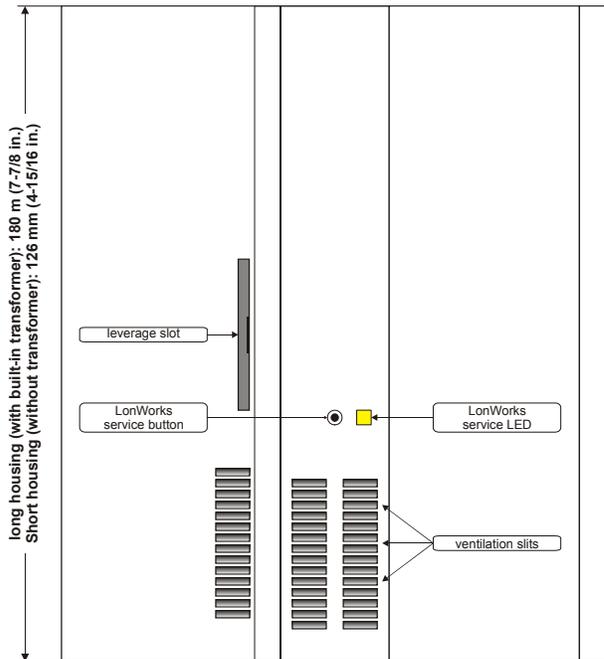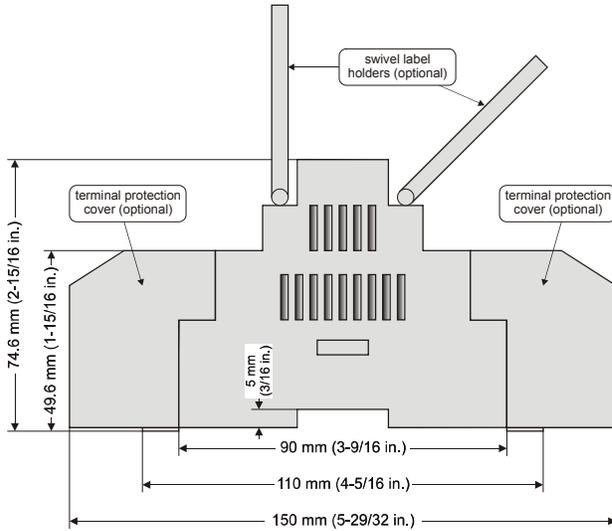

**Honeywell**

Manufactured for and on behalf of the Environmental and Combustion Controls Division of Honeywell Technologies Sàrl, Rolle, Z.A. La Pièce 16, Switzerland by its Authorized Representative:

**Automation and Control Solutions**

Honeywell GmbH  
 Böblinger Strasse 17  
 71101 Schönaich, Germany  
 Phone +49 (0) 7031 637 01  
 Fax +49 (0) 7031 637 740  
<http://ecc.emea.honeywell.com>

EN0B-0470GE51 R0116

Subject to change without notice