


## Data Sheet

Subject to technical alteration  
Issue date: 01.03.2016

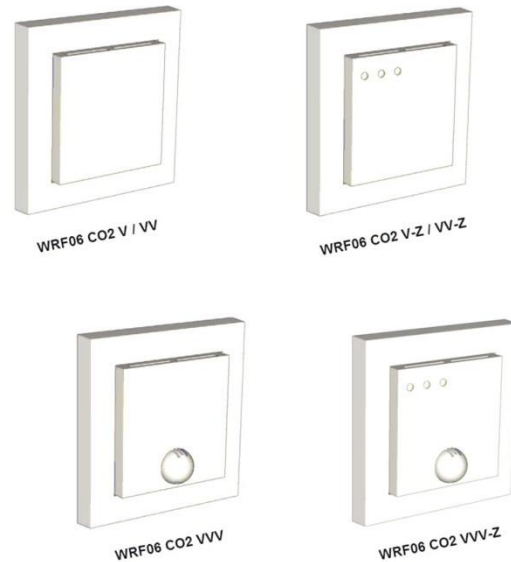

## Application

Flush mounting sensor for detection of CO<sub>2</sub>, temperature (optional) and relative humidity (optional) in room and office spaces. Fits into switch frames 55x55 mm. For direct connection to a DDC or a monitoring system, using 0..10 V outputs. Also available with traffic light LED.

## Types available

WRF06 CO2 V ... CO<sub>2</sub>: 0..10 V  
WRF06 CO2 VV ... CO<sub>2</sub>: 0..10 V / Temperature: 0..10 V  
WRF06 CO2 VVV ... CO<sub>2</sub>: 0..10 V / Temperature: 0..10 V / Humidity: 0..10 V

### Type / Option

TLF 3 LEDs for display of CO<sub>2</sub> concentration

## Security Advice – Caution



The installation and assembly of electrical equipment should only be performed by authorized personnel.

The product should only be used for the intended application. Unauthorised modifications are prohibited! The product must not be used in relation with any equipment that in case of a failure may threaten, directly or indirectly, human health or life or result in danger to human beings, animals or assets. Ensure all power is disconnected before installing. Do not connect to live/operating equipment.

Please comply with

- Local laws, health & safety regulations, technical standards and regulations
- Condition of the device at the time of installation, to ensure safe installation
- This data sheet and installation manual

## Notes on Disposal



As a component of a large-scale fixed installation, Thermokon products are intended to be used permanently as part of a building or a structure at a pre-defined and dedicated location, hence the Waste Electrical and Electronic Act (WEEE) is not applicable. However, most of the products may contain valuable materials that should be recycled and not disposed of as domestic waste. Please note the relevant regulations for local disposal.

## General remarks concerning sensors

Especially with regard to passive sensors in 2-wire conductor versions, the wire resistance of the supply wire has to be considered. If necessary the wire resistance has to be compensated by the follow-up electronics. Due to self-heating, the wire current affects the measurement accuracy, so it should not exceed 1 mA.

When using lengthy connection wires (depending on the cross section used) the measuring result might be falsified due to a voltage drop at the common GND-wire (caused by the voltage current and the line resistance). In this case, 2 GND-wires must be wired to the sensor - one for supply voltage and one for the measuring current.

Sensing devices with a transducer should always be operated in the middle of the measuring range to avoid deviations at the measuring end points. The ambient temperature of the transducer electronics should be kept constant. The transducers must be operated at a constant supply voltage ( $\pm 0,2$  V). When switching the supply voltage on/off, onsite power surges must be avoided.

## Remarks to Room Sensors

### Location and Accuracy of Room Sensors

The room sensor should be mounted in a suitable location for measuring accurate room temperature. The accuracy of the temperature measurement also depends directly on the temperature dynamics of the wall. It is important, that the back plate is completely flush to the wall so that there is sufficient circulation of air through the vents in the cover, otherwise, deviations in temperature measurement will occur due to uncontrolled air circulation. The temperature sensor should not be covered by furniture or other objects. Mounting next to doors (due to draught) or windows (due to colder outside wall) should be avoided.

### Surface and Flush Mounting

The measuring result is influenced by the thermal characteristics of the wall. A solid concrete wall responds to thermal fluctuations within a room in a much slower than a light-weight structure wall. Room temperature sensors installed in flush-mounted boxes have a longer response time to thermal variations. In extreme cases they detect the radiant heat of the wall even if the air temperature in the room is lower for example. The quicker the dynamics of the wall (temperature acceptance of the wall) or the longer the selected inquiry interval of the temperature sensor is the smaller the deviations limited in time are.

## Build-up of Self-Heating by Electrical Dissipative Power

Temperature sensors with electronic components always have a dissipative power, which affects the temperature measurement of the ambient air. The dissipation in active temperature sensors shows a linear increase with rising operating voltage. This dissipative power has to be considered when measuring temperature. In case of a fixed operating voltage ( $\pm 0,2$  V) this is normally done by adding or reducing a constant offset value. As Thermokon transducers work with a variable operating voltage, only one operating voltage can be taken into consideration, for reasons of production engineering. Transducers 0..10 V / 4..20 mA have a standard setting at an operating voltage of 24 V =. That means, that at this voltage, the expected measuring error of the output signal will be the least. For other operating voltages, the offset error will be increased by a changing power loss of the sensor electronics. If a re-calibration should become necessary later directly on the sensor, this can be done by means of a trimming potentiometer on the sensor board.

**Remark: Occurring draft leads to a better carrying-off of dissipative power at the sensor. Thus temporally limited fluctuations might occur upon temperature measurement.**

## Application Notice for Humidity Sensors

**Refrain from touching the sensitive humidity sensor/element. Touching the sensitive surface will void warranty.**

For standard environmental conditions re-calibration is recommended once a year to maintain the specified accuracy.

When exposed to high ambient temperature and/or high levels of humidity or presence of aggressive gases (i.e. chlorine, ozone, ammonia) the sensor element may be affected and re-calibration may be required sooner than specified. Re-calibration and deterioration of the humidity sensor due to environmental conditions are not subject of the general warranty.

## Information about Indoor Air Quality CO<sub>2</sub>

EN 13779 defines several classes for indoor air quality:

Category	CO <sub>2</sub> content above the content in outdoor air in ppm		Description
	Typical range	Standard value	
IDA1	<400 ppm	350 ppm	Good indoor air quality
IDA2	400.. 600 ppm	500 ppm	Standard indoor air quality
IDA3	600..1.000 ppm	800 ppm	Moderate indoor air quality
IDA4	>1.000 ppm	1.200 ppm	Poor indoor air quality

## Information about Self-Calibration Feature CO<sub>2</sub>

All gas sensors are subject to drift caused by components. This fact results generally in the need to recalibrate the sensors regularly.

With dual channel technology Thermokon integrates automatic self-calibration for different fields of operation. In contrast to common used ABC-Logic sensors with self-calibration dual channel are suitable for applications operating 24 hours, 7 days a week as for example hospitals.


**Manual calibration is not necessary!**

## Technical Data


Measuring values	V	CO <sub>2</sub>
	VV	CO <sub>2</sub> , temperature
	3xV	CO <sub>2</sub> , temperature, humidity
Output voltage	V	1x 0..10 V (min. load 10 kΩ)
	VV	2x 0..10 V (min. load 10 kΩ)
	3xV	3x 0..10 V (min. load 10 kΩ)
Power supply		15..24 V = (±10%) or 24 V~ (±10%)
Power consumption		max. 1,6 W (24 V =   3,9 VA (24 V =
Measuring values temperature	VV   3xV	0..+50 °C
Measuring range humidity	3xV	0..100% rH non-condensing
Measuring range CO <sub>2</sub>		0..2000 ppm
Accuracy temperature	VV   3xV	±1% of measuring range (typ. at 21 °C)
Accuracy humidity	3xV	±2% between 10..90% rH (typ. at 21 °C)
Accuracy CO <sub>2</sub>		±50 ppm +2% of Measuring values (typ. at 25 °C)
Calibration		self-calibration dual channel
Sensor		NDIR (non- dispersive, infrared)
Switch ranges Berker		S.1, B.3 Aluminium, B.7 glass
Switch ranges Busch-Jaeger		Busch-balance® SI, solo®, future® linear, Busch-axcent®
Switch ranges Feller		EDIZIOdue
Switch ranges Gira		E2, Standard 55, Esprit, Event
Switch ranges Jung		LS 990, A 500, AS 500, A plus, A creation, CD 500
Switch ranges Merten		M-Smart, M-Arc, M-Plan, 1-M, Atelier-M, M-Pure, Artec
Switch ranges Peha		Aura, Aura glass
Display		3 LEDs indicating air quality (traffic light function 'TLF'), (optional)
Enclosure		PC, pure white brilliant, pure white matt, aluminium, anthracite
Protection		IP30 according to EN 60529
Connection electrical		terminal block max. 1,5mm <sup>2</sup>
Ambient condition		0..+50 °C, max. 85% rH non-condensing
Weight		90 g
Notes		optional with traffic light function "TLF", please specify frame design when ordering

## Connection Plan

### 1 GND-wire for short connection wires

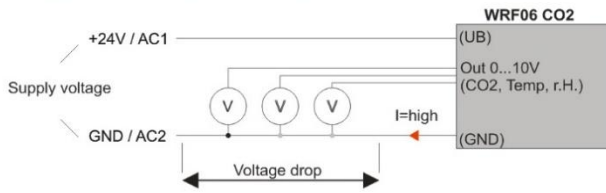

### 2 GND-wires for long connection wires

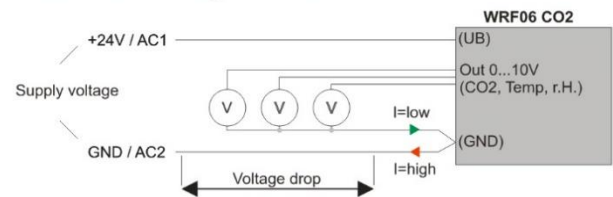


Ansicht auf Anschlussklemme  
View to the terminal



## Mounting Advices


The device is designed for mounting on a flush box. The bus cable is connected to the device by a terminal screw. For pre-wiring, the terminal screw can be drawn from the device.

Due to the extended retaining capacity for the cabling, the use of deep installation boxes is recommended. Installation must be made on representative places for the measurement value logging to avoid a falsification of the measuring result. Solar radiation and draught should be avoided. The end of the installation tube in the flush box must be sealed to avoid any draught in the tube falsifying the measuring result.

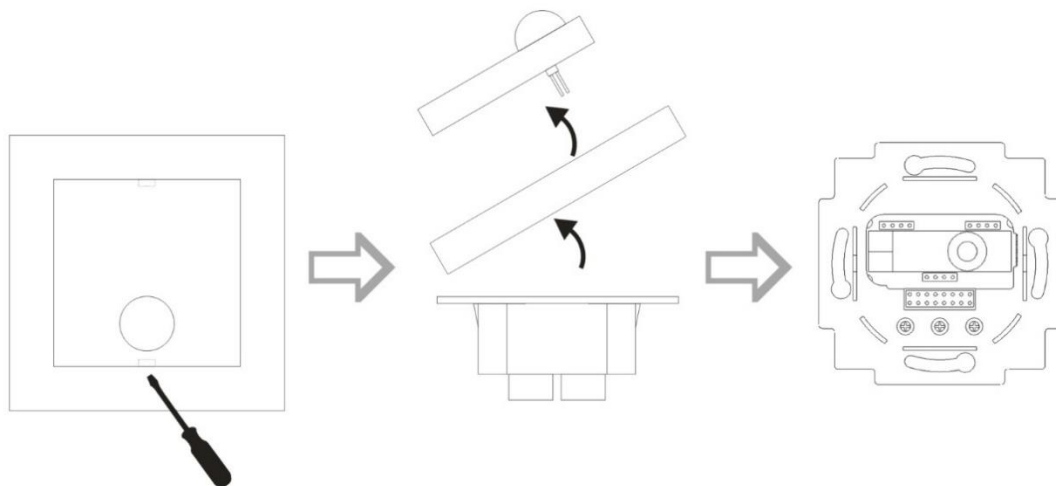


## Offset Adjustment

1. Remove sensor element – by removing the element, the last measured values of temperature/humidity/CO<sub>2</sub> are transmitted via the three outputs.
2. Afterwards, the offset adjustment is made by means of the potentiometers „Offset Temp“, „Offset rH“ and „Offset CO<sub>2</sub>“. Always correct temperature before correcting humidity!
3. Reassemble the sensor element. After a few seconds, the current temperature/humidity/CO<sub>2</sub> values are transmitted via the three outputs.

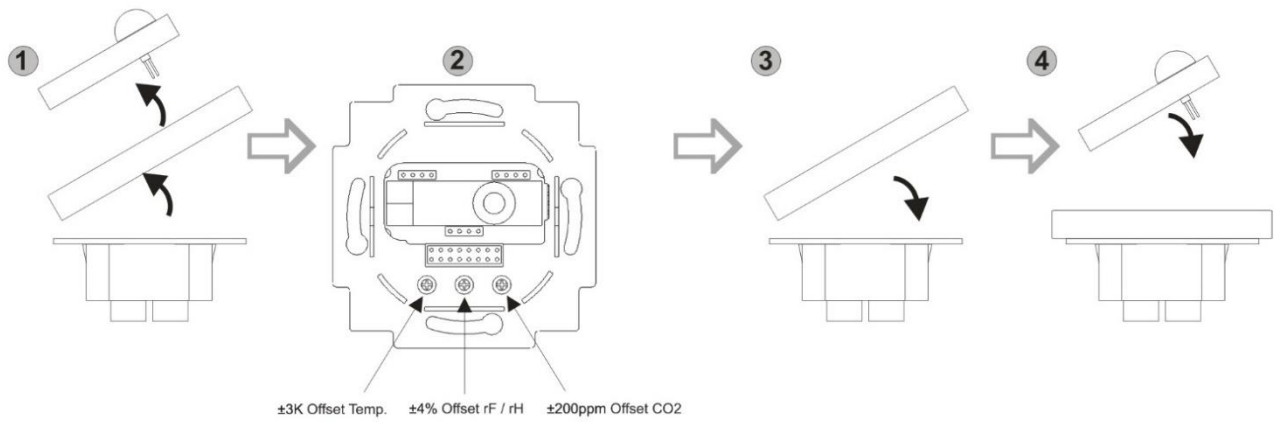

## Dimensions (mm)

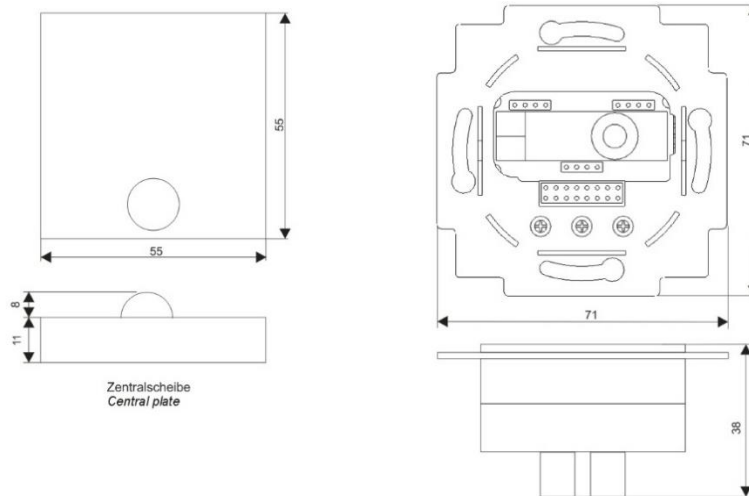

Bemerkung: Aussenabmessungen abhängig vom verwendeten Rahmen aus dem jeweiligen Schalterprogramm  
 Notice: Outside dimensions are depending on the frame used of the respective switch programme

## Accessories (optional)

Raw plugs and screws (2 pcs. each)

Item No.: 102209