



## FDA241, FDA221

### Siemens ASD

---

- Patented Technology
- Compatible with the Siemens FDnet/C-NET loops (requires FDCC221S option)
- Advanced dual Wavelength optical detection (Blue & Infra-red)
- Configurable as a Standalone via a USB port or via the Panel when on a network loop using the optional FDCC221S
- Out-of-the-box installation and commissioning
- Early detection of a wide range of airborne particle sizes
- Asyst software tool for sample pipe designs support
- Programmable alarm thresholds
- The unique chamber design ensures clean detection chamber optics
- Instant recognition front panel display
- Normalize Smoke
- Normalize Air flow
- Easy field service accessibility
- Multiple event logging
- Offline/online configuration capability
- FDA241 Up to 800 m<sup>2</sup> coverage
- FDA221 Up to 500 m<sup>2</sup> coverage
- 4-20mA output
- Purge functionality (FDA241)

The FDA241/221 series of detectors are a very early warning dual wavelength (blue & infra-red) smoke detectors designed to protect small to medium, business-critical environments up to 800 m<sup>2</sup> with the FDA241 or 500 m<sup>2</sup> with the FDA221).

The detector works by continually drawing air into sampling holes in a pipe network. The air is passed into a uniquely designed detection chamber where light scattering technology detects the presence of very small amounts of smoke.

**Lower installation and service support costs**

The FDA241 and FDA221 detectors can communicate directly on the FDnet/C-NET loops (with an optional FDCC221S PCB), so there is no need for separate relay or network connections. This reduces the cost of installation and service. The detector acquires its loop address automatically.


**Fire control panel programming (requires FDCC221S option)**

The sophisticated integration on FDnet/C-NET allows for detector configurations, maintenance and alarm/fault management to be performed centrally – at the fire control panel. This increases control and lowers total solution cost.

**Out-of-the-box operation**

The FDA241 and FDA221 can be installed and commissioned out-of-the-box. Normalize smoke density and air flow functionality, suitable default alarm and fault thresholds makes for an easy installation.

**Display**

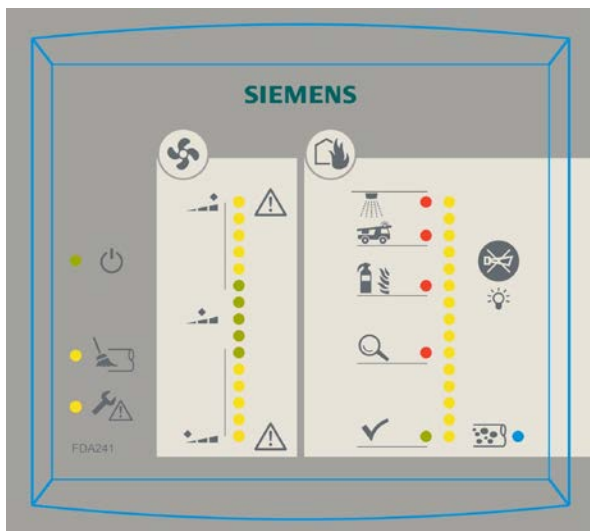


The front panel display includes an easy to read smoke density and airflow level bar graph, alarm, fault status and dust indicator (FDA241 only).

When the field service access cover is open, the user has access to the Reset, Normalize Smoke & Flow buttons and a mini USB communication connector.

**Legend to Indicators**

	Power Betrieb Démarrer		Flow Fault Warning Fluss-Warnungen Défaut Débit		Smoke Alarms Rauch Alarm Alarme Fumée		(FDA241 Only) Info Alarm Info-Alarm Info-Alarme
	(FDA241 Only) Purge Ausblasen Extinction		High Flow Hoher Durchfluss Débit élevé		Fire 2 Feuer 2 Feu 2		No Smoke Kein Rauch Pas de Fumée
	Fault Fehler Erreur		Normal Flow Normaler Durchfluss Débit Normal		Fire 1 Feuer 1 Feu 1		Buzzer/Test Störung/Test Erreur/Test
			Low Flow Niedriger Durchfluss Débit Faible		Pre-Alarm Vor-Alarm Pre-Alarm		(FDA241 Only) Dust Staub Poussière

## Opening the detector

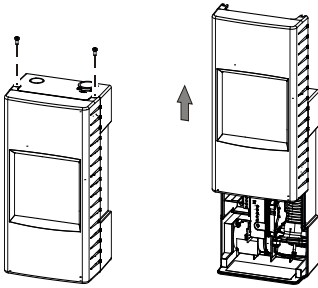

There are 2 modes for accessing the detector service area.

### Partial access


Remove the 2 screws on the top of the detector. Slide the front cover upward until it reaches the self locking tabs.

### Full access

Remove the 2 screws on the top of the detector. Slide the front cover upward until it reaches the self locking tabs. Grasp the cover on the sides and gently apply pressure to spread the cover sides outward. This will enable the cover to be totally removed.

**Warning:** Take notice of the front panel connecting cable if fully removing the cover.

## Service Access – Display LEDs and Buttons

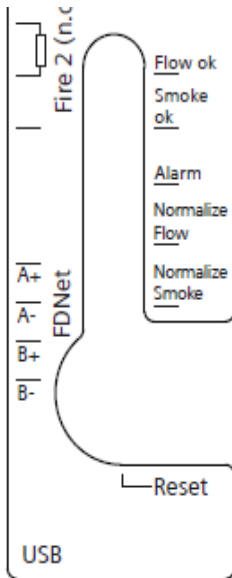

### Flow OK

If self check is OK the Flow OK LED starts flashing to indicate normal operation.

### Smoke OK

If self check is OK the Smoke OK LED starts flashing to indicate normal operation.

### Alarm

The Alarm LED flashes in the event of a smoke alarm.

### Normalize flow button

As each installation will require a different sampling pipe configuration, this function is used to set the zero reference for the bargraph. This function is required to be done during commissioning of the detector. The nominal flow value which is determined during the normalize flow period is then the zero set point value for the air flow monitoring during normal operation.

To use this function, use a thin tool such as a paper clip or a small jeweller's screwdriver, place the tool into the hole and push the normalize flow button.

During the Normalization period the detector is still actively monitoring for smoke using the default values.

### Normalize smoke button

This function is used to determine the nominal clean air value for the detector. This is required to be done during commissioning. The nominal value which is determined during the normalize period is then the set point value for the smoke monitoring during normal operation.

To use this function, use a thin tool such as a paper clip or jeweller's screwdriver, place the tool into the hole and push the normalize smoke button.

This function could be manually stopped by pressing the Normalize button again. During the Normalization period the detector is still actively monitoring for smoke using the default values.

### Note:

The detector indicates over FDnet/C-NET) that normalizing is active (no distinguishing between smoke and air flow)

**Reset:**

Pressing the Reset button, resets all latched states of the detector. Latched states can be fire alarms or airflow out-of-range events. If a fire alarm is reset the associated relay is also reset.

**Note:**

If the detector is connected to FDnet, the alarms and associated relays are set to non-latching

**USB Connector:**

The mini USB connector is used connect to a laptop when required to re-configure the detector using the ASD Configuration Tool F-FXS2051

**LED Test Function:**

Press and hold the "Buzzer silence button" for 5 seconds.

The detector will cycle through a full LED display to check the operation of all LEDs

---

If connecting the Siemens ASD directly to a Siemens FDnet, C-NET loop, the FDCC221S communication card must be ordered as a separate item. (S24218-A201-A2)

## Technical data

		FDA241	FDA221
<b>Input power</b>			
Voltage	DC 19-30V	√	√
Current @ 24 VDC	150 mA nominal, 250 mA in Alarm	√	√
Dimensions (W x H x D)	162 mm x 285 mm x 120 mm	√	√
Weight	approx. 1.5kg ( 3.3 lbs)	√	√
Protection category	IP30	√	√
Mounting	upright, inverted	√	√
<b>Operating conditions</b>			
Detector ambient	-20 to 60 °C	√	√
Humidity	5 to 95% (no condensation)	√	√
Dust Indicator		√	
<b>Sampling network</b>			
Maximum pipe lengths	Single pipe length	60m	30m
	Branched pipe lengths	2x60m	2x25m
Sampling hole options	In accordance to the Asyst tool used for sample pipe modeling		
Air inlet/exhaust pipe	Metric: 25 mm Outside diameter (OD), Imperial 1.05 inches (US pipe)		
Area coverage	depending on local codes and standards	Up to 800m <sup>2</sup>	Up to 500m <sup>2</sup>
System compatibility	compatible with all Siemens FC20/FC720 (FS20/FS720 system)		
Alarm Relay outputs selectable Latching/Non Latching rated 2.0A @ DC 30 V (max). NO/NC Contacts		Qty 4	Qty 3
Fault Relays		Qty 1	Qty 1
Cable access	Rear 10cm x 2.5cm or top entry		
Cable termination	Screw terminals 0.2... 2.5 mm <sup>2</sup> (30–12 AWG)		
Other Interfaces	Power in/out, 4-20mA		
<b>Alarm threshold parameter sets</b>			
Fire 1		10 sets 0.05 ... 2.0 % obs/m	5 sets 0.20... 2.0 % obs/m
Fire 2		10 sets 2.0... 20 % obs/m	5 sets 6.0... 20 % obs/m
Individual alarm delays	0... 300 seconds: Default 60sec Smoke, 15sec Flow fault		
Front Display	<ul style="list-style-type: none"> <li>● 4 Alarm state indicators (FDA241)</li> <li>● 3 Alarm state indicators (FDA221)</li> <li>● Fault Indicators</li> <li>● Purge (FDA241)</li> <li>● Dust (FDA241)</li> <li>● Smoke and Airflow level Bargraphs</li> </ul>		
	<ul style="list-style-type: none"> <li>● Status OK LEDs</li> </ul>		
Service Area	<ul style="list-style-type: none"> <li>● USB connector</li> <li>● Reset</li> <li>● Smoke and Airflow Normalize buttons</li> </ul>		
Event log	Time and date stamped in separate, non-volatile, logs for: smoke level, flow level, detector status and faults		
Normalize smoke & air flow	<ul style="list-style-type: none"> <li>● Set acceptable smoke alarm and fault thresholds</li> <li>● User adjustable period for airflow and smoke</li> <li>● During Normalize period, pre-set default values are maintained</li> </ul>		
Warranty period	2 Years		

13  0786**FDA221 / FDA241**Siemens Switzerland Ltd, Gubelstrasse 22  
CH-6301 Zug, Switzerland  
Technical data: see doc. **A6V10345654**

Aspirating smoke detector, optional incl. FDCC221S short-circuit isolator for use in detection and fire alarm systems installed in buildings

305/2011/EU (CPR): EN 54-20; 2004/108/EC (EMC): EN 50130-4 / EN 61000-6-3; 20011/65/EU (RoHS): EN 50581

Declared performance and conformity can be seen in the Declaration of Performance and the EC Declaration of Conformity,  
which is obtainable via the Customer Support center: Tel. +49 89 9221-8000 or <http://siemens.com/bt/download>

DoP No.: 0832-CPR-21270; DoC No.: CED-FDA221-FDA241

**Details for ordering**

Type	Part no	Designation	Weight
FDA241	S54333-F17-A1	Aspirating smoke detector (8H)	2.500 kg
FDA221	S54333-F15-A1	Aspirating smoke detector (5S)	2.500 kg
FDCC221S	S24218-A201-A2	Communication interface	0.019 kg

Siemens Switzerland Ltd  
Infrastructure & Cities Sector  
Building Technologies Division  
International Headquarters  
CPS Fire Safety  
Gubelstrasse 22  
CH-6301 Zug  
Tel. +41 41 724 24 24  
[www.siemens.com/buildingtechnologies](http://www.siemens.com/buildingtechnologies)© 2014 Copyright by  
Siemens Switzerland LtdData and design subject to change without notice.  
Supply subject to availability.Document no. **A6V10331032\_b\_de\_--**

Edition 03.2014